REVISION HISTORY BG2T CHASSIS

MODEL

KV-TG21M20

PART NO.: 9-872-285-01

NO.	SUFFIX	DATE	SUPPL. / CORR	DESCRIPTION
1	-01	2002/01	--	1st. Issue

Self Diagnosis
Supported model

SERVICE MANUAL BG2T CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-TG21M20	RM-952	South Afrika					

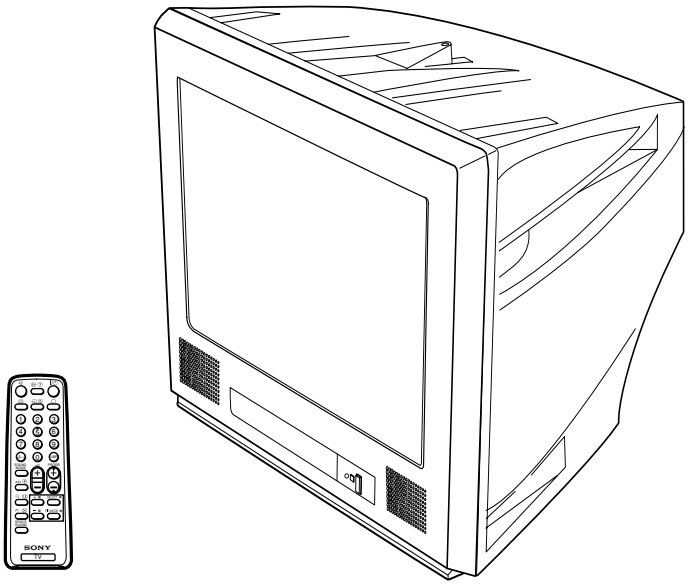

TRINITRON® COLOR TV

SONY®

SPECIFICATIONS

			Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K		
Color system	PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43		
Channel coverage			
B/G	VHF: E2 to E12 / UHF: E21 to E69 / CATV: S01 to S03, S1 to S41		
I	UHF: B21 to B68 / CATV: S01 to S03, S1 to S41		
D/K	VHF: C1 to C12, R1 to R12 / UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39		
⅂⅂ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	3W + 3W		
Number of terminal			
Video	Input: 2* Output: 1	Phono jacks; 1 V_{P-P}, 75 ohms	* One input line available
♪ Audio	Input: 2* Output: 1	Phono jacks; 500 mVrms	* One input line available
(Headphone)	Output: 1	Stereo minijack	
Picture tube	21 in.		
Tube size (cm)	54		Measured diagonally
Screen size (cm)	51		Measured diagonally
Dimension (w/h/d, mm)	497 x 458 x 487		
Mass (kg)	25		

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section *Title* *Page*

SELF DIAGNOSTIC FUNCTION 4

1. GENERAL 7

2. DISASSEMBLY
2-1. Rear Cover Removal 10
2-2. Speaker Removal 10
2-3. Chassis Assy Removal 10
2-4. Service Position 10
2-5. Terminal Bracket Removal 10
2-6. Replacement of Parts 11
2-6-1. Replacement of Light Guide 11
2-6-2. Replacement of Power Button 11
2-7. Picture Tube Removal 11

3. SET-UP ADJUSTMENTS
3-1. Beam Landing 13
3-2. Convergence 14
3-3. Focus Adjustment 16
3-4. G2 (SCREEN) and White Balance Adjustments ... 16

4. CIRCUIT ADJUSTMENTS
4-1. Adjustment With Commander 17
4-2. Adjustment Method 17
4-3. Picture Quality Adjustment 23
4-4. Deflection Adjustment 23
4-5. A Board Adjustment After IC003 (MEMORY) Replacement 23
4-6. Picture Distortion Adjustment 24

Section *Title* *Page*

5. DIAGRAMS
5-1. Block Diagram 25
5-2. Circuit Boards Location 27
5-3. Schematic Diagram 28
(1) A Board Schematic Diagram 29
(2) CV Board Schematic Diagram 31
5-4. Voltage Measurement 32
5-5. Waveforms 35
5-6. Printed Wiring Boards and Parts Location 36
5-7. Semiconductors 39

6. EXPLODED VIEWS
6-1. Picture Tube and Chassis 41

7. ELECTRICAL PARTS LIST 42

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (A)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) • Horizontal deflection overdrive	2 times	002:000 or 002:001~255	• H.OUT Q801 is shorted. (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE) • Vertical deflection stopped	4 times	004:000 or 004:001~225	• -13V is not supplied. (CV Board) • IC551 faulty (A board)	• Vertical deflection pulse is stopped
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (CV Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.
The symptom that is diagnosed first by the microcontroller is displayed on the screen.
Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

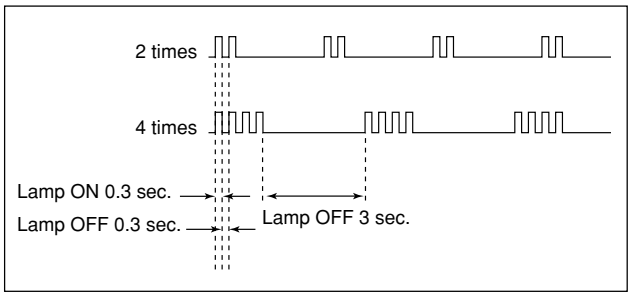

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage	2 times
Vertical deflection stopped	4 times

* One flash count is not used for self-diagnostic.

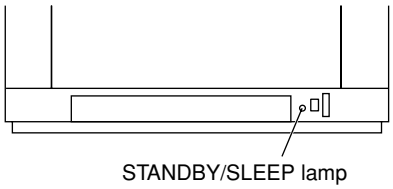

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]
In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display ➡ channel 5 ➡ Sound volume - ➡ Power ON

⇧

Note that this differs from entering the service mode (mode volume +).

Self-Diagnosis screen display

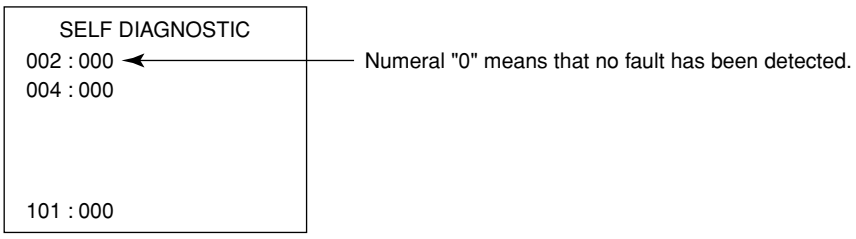

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]
To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]
To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

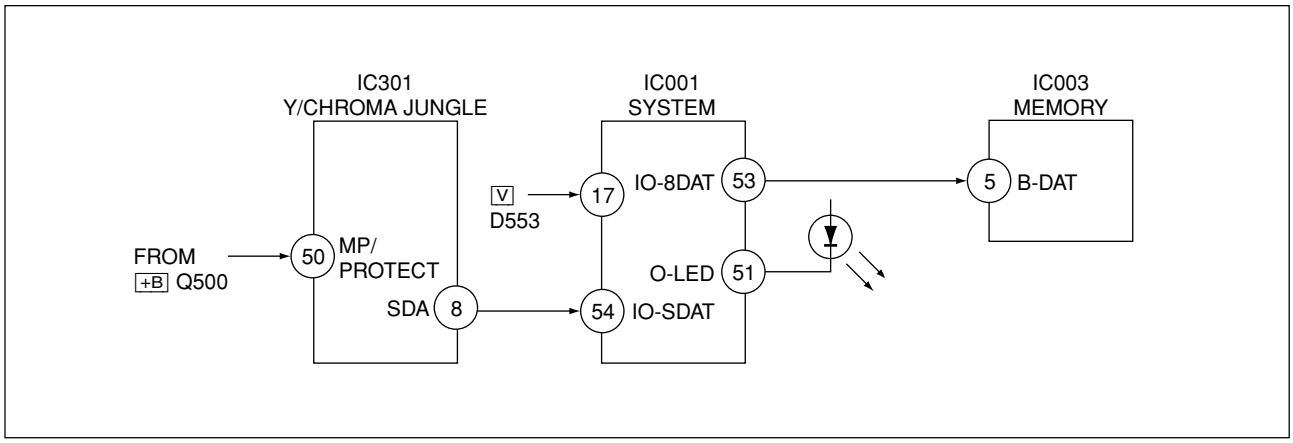

[+B overcurrent (OCP)]	Occurs when an overcurrent on the +B(135) line is detected by Q500. If Q500 go to ON and the voltage to pin 50 of IC301 more than 3.5V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
[Vertical deflection stopped]	Occurs when an absence of the vertical deflection pulse is detected by Pin 17 and IC001 shut down the power supply.
[White balance failure]	If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture. * (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1 GENERAL

A Getting Started

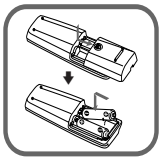

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old batteries nor use different types of batteries together.

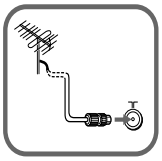

Step 2

Connect the antenna cable (not supplied) to ⊤ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components. (See E)

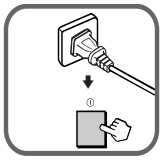

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

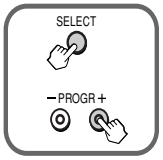

Step 4

Press SELECT and PROGR + on the TV at the same time for one to two seconds to preset the channels automatically. (See J)

Tip

- To stop the automatic channel presetting, press SELECT.

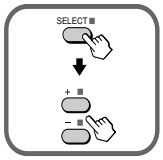

Step 5

Press SELECT on the remote until "LANGUAGE/اللغة: ENGLISH" appears on the screen, then press + or – to change the on-sceen display language.

B WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

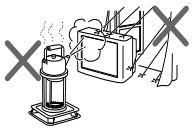

To prevent fire or shock hazard, do not expose the TV to rain or moisture.



Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.



Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.



Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

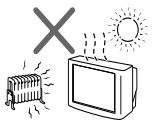

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

WARNING (continued)



Do not place any objects on the TV.

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.

Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

C Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

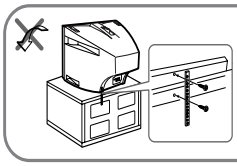

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

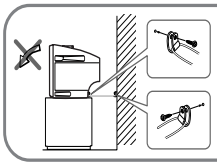

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

D TV front and rear panels

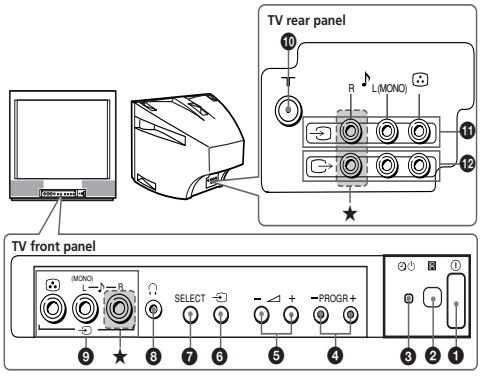

Button	Function
❶ ⏻	Turn off or turn on the TV.
❷ R	Remote control sensor.
❸ ⏻	Standby indicator.
❸ 🕒	Wake Up indicator.
❹ PROGR +/–	Select program number.
❺ ◿ +/– *	Adjust volume.
❻ ⊖	Select TV or video input.
❼ SELECT	Select the desired item.
❽ 🎧	Headphone terminal. (KV-TG21M20 only)
❽ 🎧	Earphone terminal. (KV-PG21M10 only)
❾, ⓫ ⊖	Video input terminal.
❿ ⊤	Antenna input terminal.
⓬ ⊖	Monitor output terminal.

* You can also use the ◿ +/– buttons on the TV to work as the +/– buttons on the remote.

★ *The R (audio input) jacks are available for KV-TG21 only.*

E Connecting optional components

Connecting to the video input terminal ( )

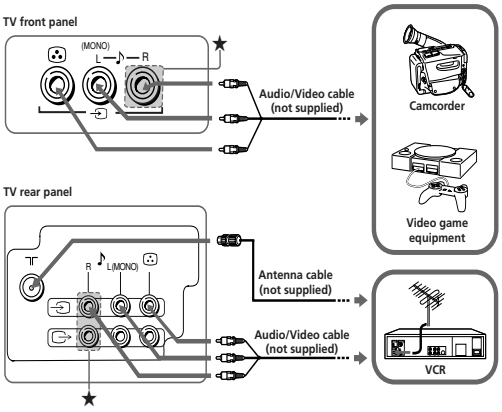

Note

- Do not connect video equipment to (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting to the monitor output terminal ( )

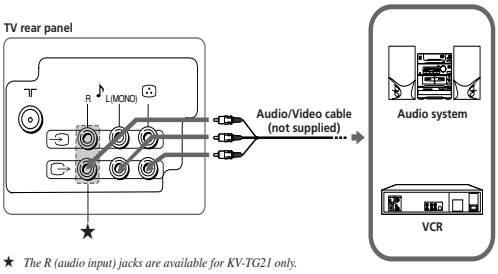

★ *The R (audio input) jacks are available for KV-TG21 only.*

F Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Solutions
Snowy picture, noisy sound	• Check the antenna cable and connection on the TV, VCR and on the wall. • Preset the channel manually again. (See J) • Check the antenna setup. Contact a Sony dealer for advice.
Good picture, noisy sound	• Select the appropriate TV system. (See J)
No picture,no sound	• Check the power cord, antenna and the VCR connections. • Press I/ (power) or (main power) to turn on the TV.
Good picture, no sound	• Press + to increase the volume level. • Press to cancel the muting.
Dotted lines or stripes	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.
Double images or "ghosts"	• Use the fine tuning ("FINE") function. (See J) • Turn off or disconnect the booster if it is in use. • Check the antenna setup. Contact a Sony dealer for advice.
No color	• Select the appropriate color system. (See J) • Adjust the color level. (See K) • Check the antenna setup. Contact a Sony dealer for advice.
Abnormal color patches	• Keep external speakers or other electrical equipment away from the TV. Press (main power) to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The (standby) indicator on your TV flashes red several times after every three seconds.	• Count the number of times the (standby) indicator flashes. Press (main power) to turn off your TV. Contact your nearest Sony service center.
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.

H Remote control

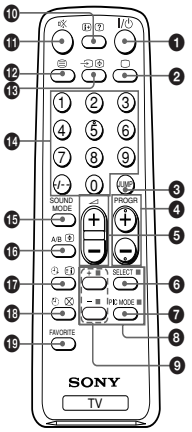

Button	Function	See
❶ I/	Turn off temporarily or turn on the TV.	–
❷	Display the TV program.	–
❸ JUMP	Jump to previous program number.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻ SELECT	Select the desired item.	–
❼ PIC MODE	Select picture mode.	K
❽ +/–	Adjust items.	–
❿	Display on-screen information.	–
⓫	Mute the sound.	–
⓬	Select TV or video input.	–
⓮ 0 – 9, -/--	Input numbers.	–
Timer operations		
⓱	Set TV to turn on automatically.	I
⓲	Set TV to turn off automatically	I
Sound mode operations (KV-TG21M20 only)		
⓯ SOUND MODE	Select sound mode.	K
⓰ A/B	Not function for your TV.	–
Teletext operations (green label)		
❽ ■ (red, green, yellow, blue) ❿ ⓬ ⓭ ⓰ ⓱ ⓲	Not function for your TV.	–
⓯ FAVORITE	Not function for your TV.	–

I Setting the timers

You can turn on and off your TV by using the and buttons respectively.

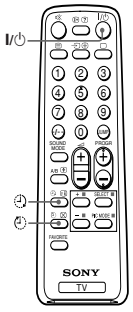

Setting the Wake Up timer

1 Press until the desired period of time appears on the screen.



The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/, or set the Sleep timer if you want the TV to turn off automatically.

The indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press until the desired period of time appears on the screen.



The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

J Presetting channels

You can automatically preset up to 100 TV channels in numerical sequence from program number 1, or manually preset desired channels and channels that cannot be preset automatically.

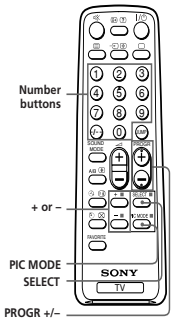

Presetting channels automatically from a specified program number

1 Press SELECT until "AUTO PROGRAM" appears on the screen.

2 Press + or – once to enter the "AUTO PROGRAM" mode.
The on-screen display will start flashing.

3 Press PROGR +/– or the number buttons until the desired program number appears on the screen.

4 Press + or – to start presetting channels automatically.

Presetting channels manually

1 Press SELECT until "MANUAL PROGRAM" appears on the screen.

2 Press + or – once to enter the "MANUAL PROGRAM" mode.

3 Press PROGR +/– or the number buttons until the desired program number appears on the screen.

4 Press + or – until the desired channel picture appears on the screen.

5 To preset other channels manually, repeat steps 3 to 4.

K Customizing the picture and sound

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

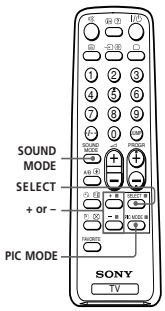

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

Selecting the sound mode

▶ **KV-TG21M20 only**

Press SOUND MODE to select the desired sound mode.

Select	To
"♪ DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"♪ DRAMA"	listen to sound that emphasizes vocals and background music.
"♪ SOFT"	listen to soft sound.

Adjusting the picture and sound settings

1 Press SELECT until the desired setting appears.
Each time you press SELECT, the setting item will change as follows:

PICTURE → COLOR → BRIGHT → HUE → SHARP → BASS → TREBLE → BALANCE → PICTURE

2 Press + or – to adjust the item.

3 To adjust other items, repeat steps 1 to 2.

Notes
- "BASS", "TREBLE" and "BALANCE" can be adjusted for KV-TG21M20 only.
- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

Presetting channels (continued)

To change the TV system setting

If the picture or sound is abnormal when receiving programs through the ⅄ (antenna input) terminal

(1) Press SELECT until "TV SYS" appears on the screen.

(2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.

B/G → I → D/K

To change the color system setting

If the color is abnormal when receiving programs through the ⅄ (antenna input) terminal or the ⇨ (video input) terminal

(1) Press SELECT until "COLOR SYS" appears on the screen.

(2) Press + or – to select the appropriate color system until the color is optimal.

AUTO → PAL → NTSC3.58 → NTSC4.43

To skip program numbers

(1) Press PROGR +/– or the number buttons until the unused or unwanted program number appears on the screen.

(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.

(3) Press + or – once to enter the "MANUAL PROGRAM" mode.

(4) Press PIC MODE to skip the unused or unwanted program number.

(5) Press SELECT to exit the "MANUAL PROGRAM" mode.

Note
- To restore the skipped program number again, preset the channel automatically or manually.

To use the fine tuning function

The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

(1) Select the program number you want to adjust.

(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.

(3) Press + or – once to enter the "MANUAL PROGRAM" mode.

(4) Press ⊞ to display "FINE" on the screen.

(5) Press + or – continuously until the above problems are minimized.
The + or – icon on the screen flashes while tuning.

(6) Press SELECT to exit the "MANUAL PROGRAM" mode.

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

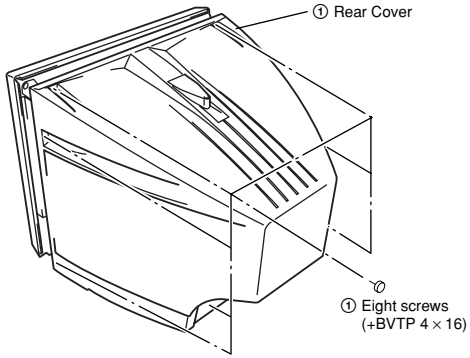

2-2. SPEAKER REMOVAL

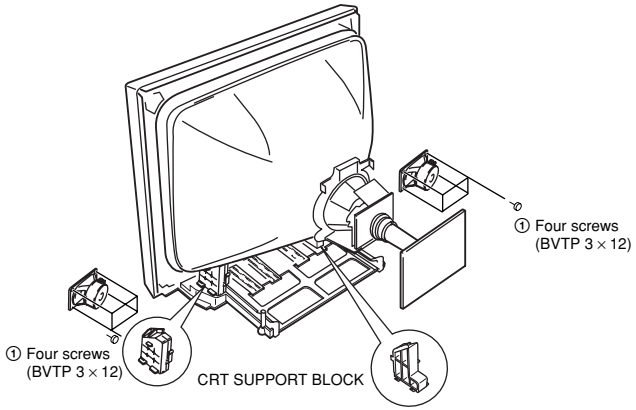

2-3. CHASSIS ASSY REMOVAL

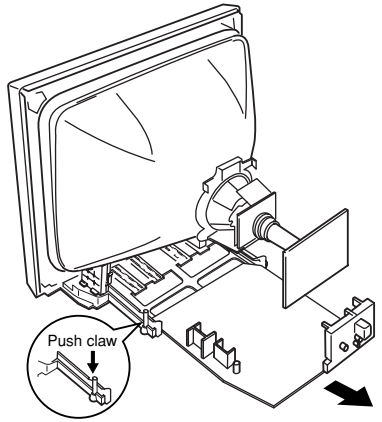

2-4. SERVICE POSITION

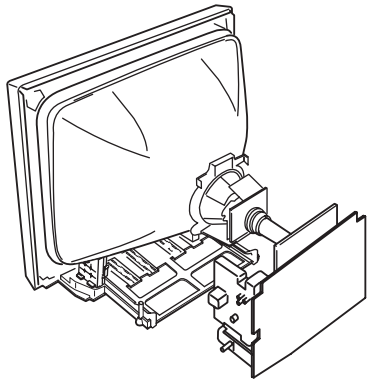

Caution: Do not take out CRT support block while TV set in standing position.

Note: Undress necessary wires that creates tension while placing the chassis into Service Position.

2-5. TERMINAL BRACKET REMOVAL

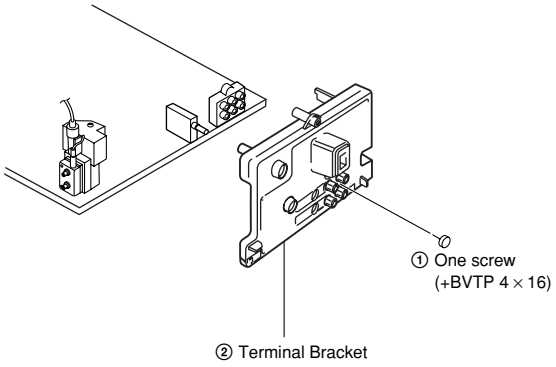

2-6. REPLACEMENT OF PARTS

For replacements of light guide,unscrew them, exchange with new parts and fix them with screws respectively.

2-6-1. Replacement of Light Guide

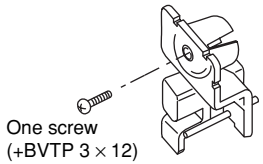

2-6-2. Replacement of Power Button

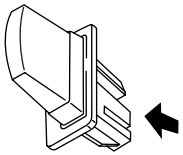

2-7. PICTURE TUBE REMOVAL

Note:

- The picture tube is upside down, and the position for the anode cap and tension springs are changed accordingly.
- Please remove necessary CRT support located on top left, top right, bottom left, bottom right, prior to removing the CRT.

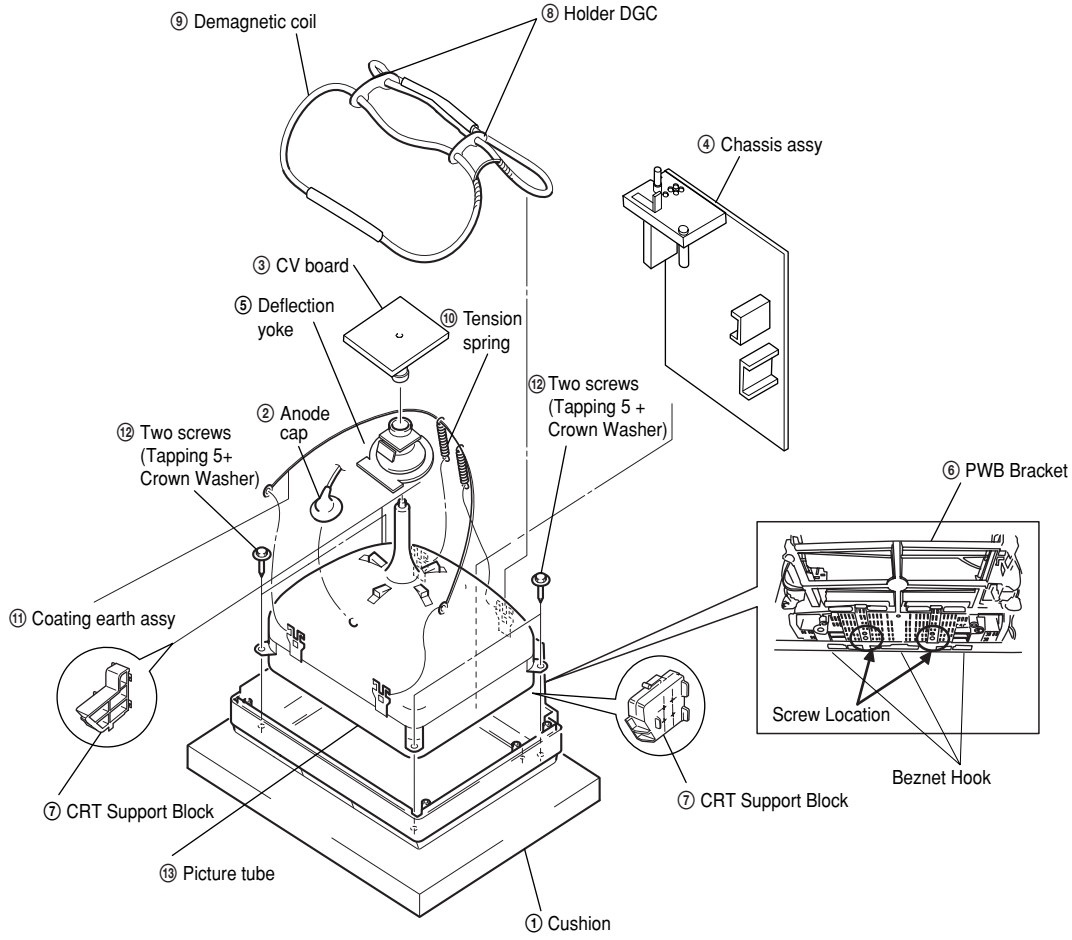

• REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

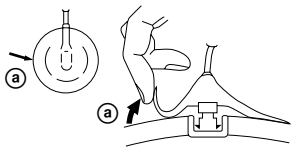

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

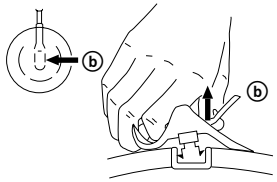

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

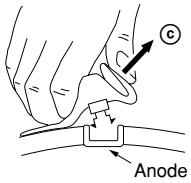

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Do not damage the surface of anode-caps with sharp shaped objects.
② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

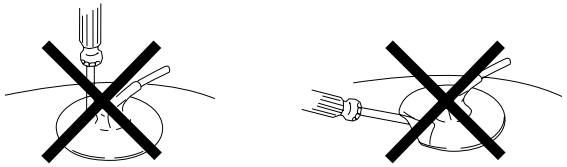

SECTION 3
SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 3-1 through 3-4.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 3-4.)

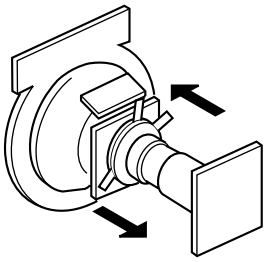

Fig. 3-1

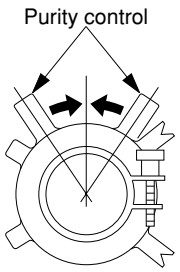

Fig. 3-2

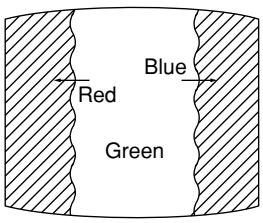

Fig. 3-3

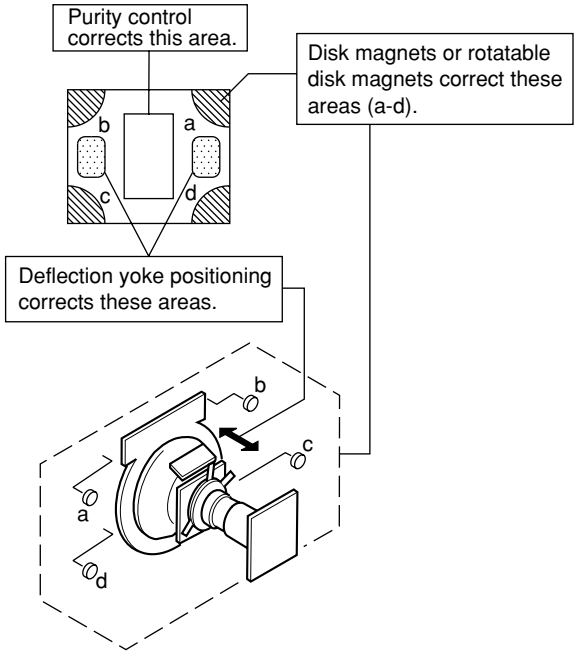

Fig. 3-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Soft.

(1) Horizontal and Vertical Static Convergence

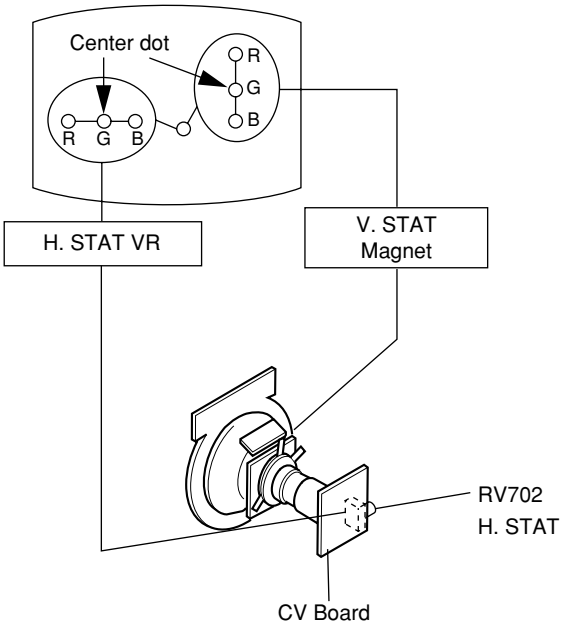

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving horizontally), adjust the H.STAT VR control so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

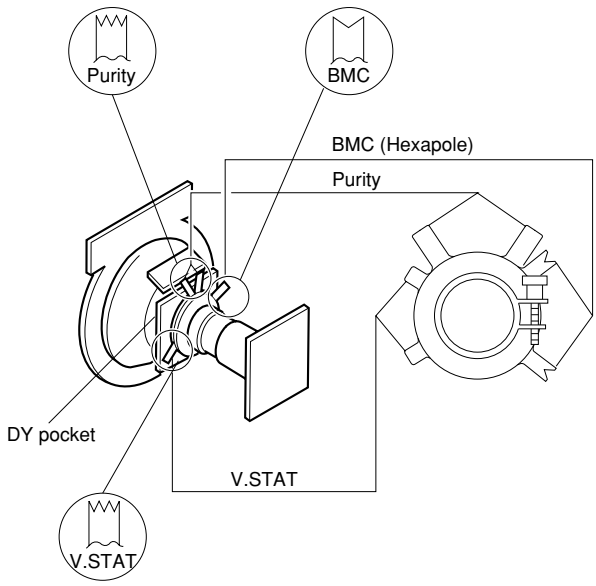

- Operation of V. Stat magnet
  If the V. Stat magnet is moved in the "a" and "b" arrows, the red, green and blue dots move as shown below.

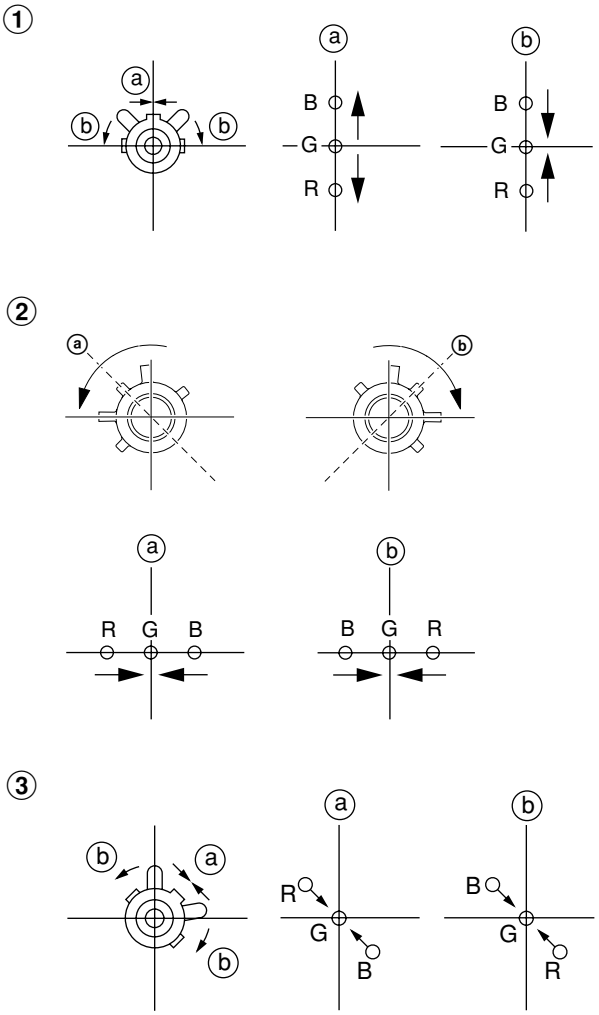

④ BMC (Hexapole) Magnet.
If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

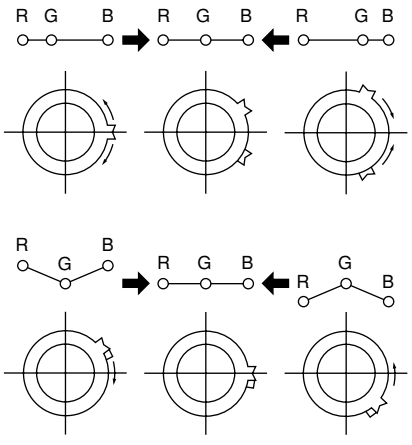

(2) Dynamic Convergence Adjustment

Preparation:

Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

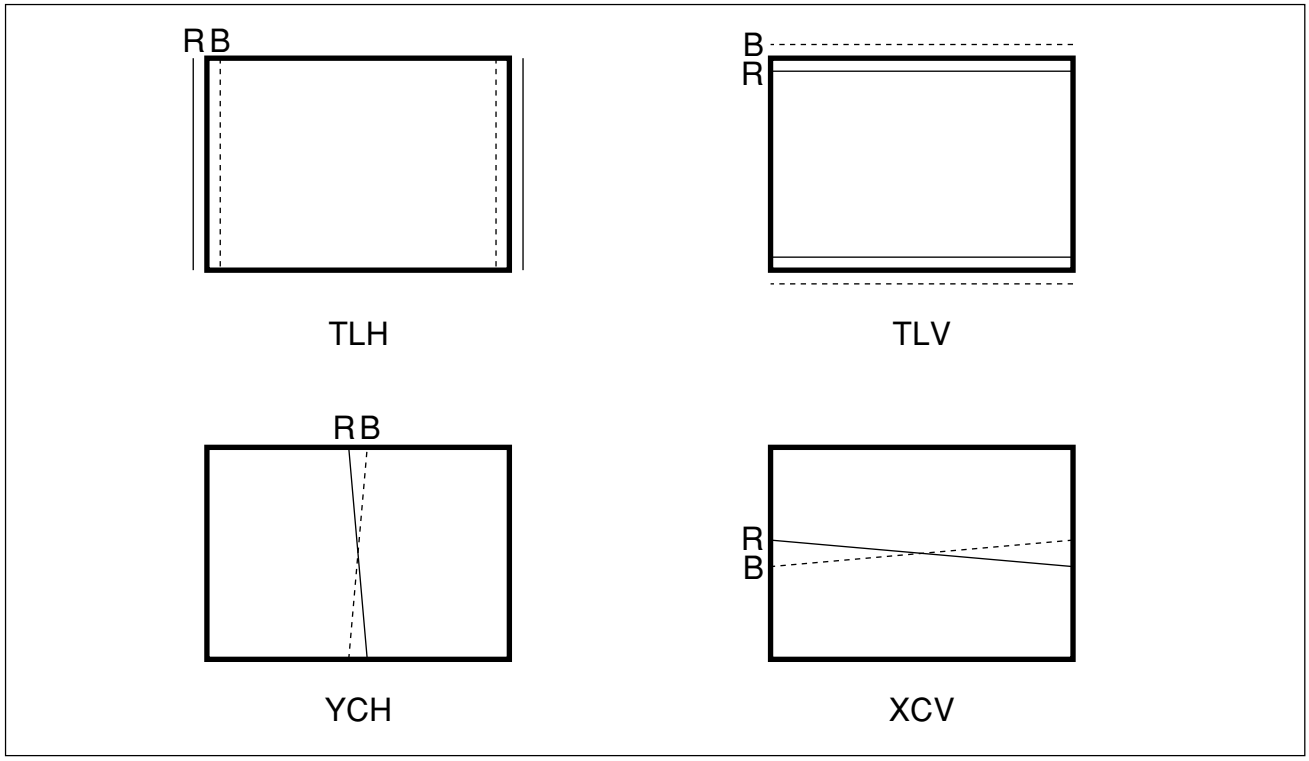

TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)
YCH	Rotate	YCH	VOL on DY
TLV	Rotate	TLV	VOL ON DY
XCV	Rotate	XCV	Adj core on DY

ON DY:

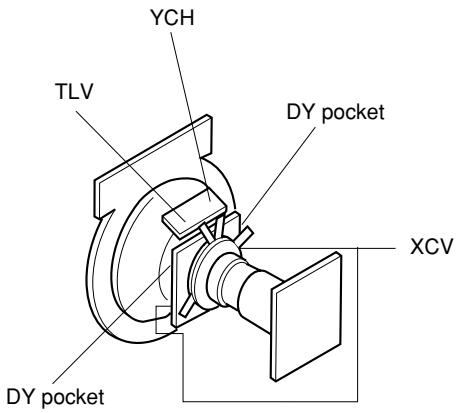

(3) Screen-corner Convergence

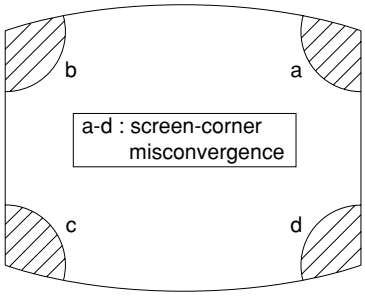

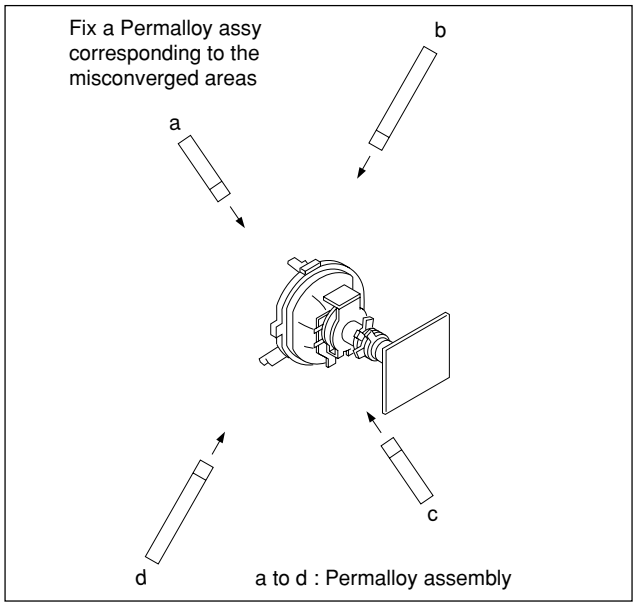

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.

1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the center of screen becomes just focus.
4. Change the receiving signal to white pattern and blue back.
5. Confirm magenta ring is not noticeable. Incase magenta is very obvious, adjust focus VR to take balance of magenta ring and focus.

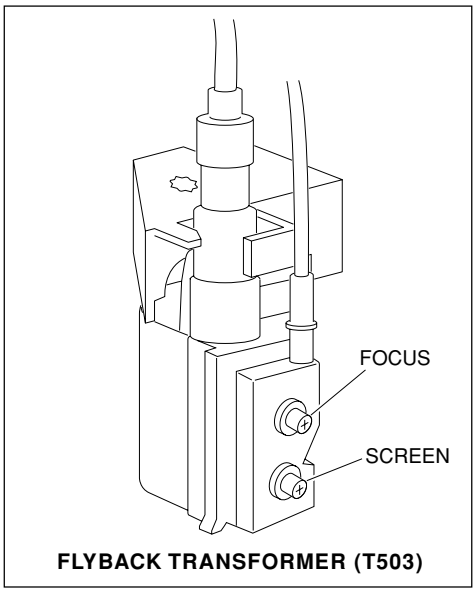

FLYBACK TRANSFORMER (T503)

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the CV board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

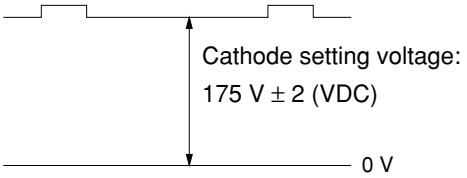

2.a). WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set ABL (49) and VP2 (IF) service mode to 00.
4) Set Picture to DYNAMIC.
5) Select RDR (0B) with [1] and [4], and set the level to 25 with [3] and [6] for best white balance.
6) Select GDR (0C) and BDR (0D) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].
8) Set back ABL (49) and VP2 (IF) service mode to original data.

2.b). SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Set ABL (49) and VP2 (IF) service mode to 00
3) Input a staircase signal of black to white from the pattern generator.
4) BRIGHTNESS .... 50%.
   PICTURE ..... MINIMUM
5) Select OE (SBR) with [1] and [4], and adjust OE (SBR) level with [3] and [6] so that the second stripe from the right is dimly lit.
6) Write into the memory by pressing [MUTING] then [0].
7) Set back ABL (49) and VP2 (IF) service mode to original data.

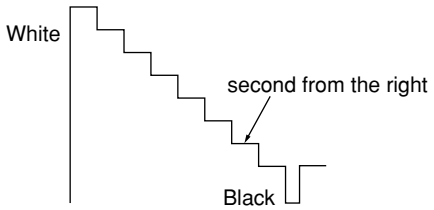

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENT WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-952

a. ENTERING SERVICE MODE

With the unit on standby

→ DISPLAY → 5 → VOL (+) → POWER

This operation sequence puts the unit into service mode.

The screen display is :

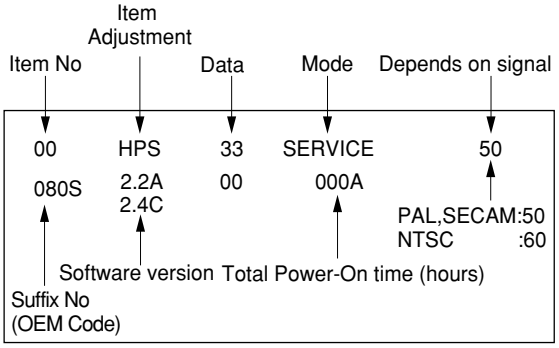

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press POWER button on the commander, then press POWER button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press 1 (UP) and 4 (DOWN), to select the adjustment.
4) Press MUTING button to indicate WRITE on the screen.
5) Press 0 button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

1, 4	Select the adjustment item.
↓	
3, 6	Raise/lower the data value.
↓	
MUTING	Writes.
↓	
0	Executes the writing.

e. OTHER FUNCTION VIA REMOTE COMMANDER

7, 0	All the data becomes the values in memory.
8, 0	All user control goes to the standard state.
5, 0	Service data initialization (Be sure not to use usually.)
2, 0	Copy and write all data.
MUTE, 0	Write 50Hz adjustment data to 60Hz or vice versa.

4-2. ADJUSTMENT METHOD

Item Number 00 HPS

This explanation uses H POSITION as an example.

1. Select "00 HPS" with the 1 and 4 buttons.
2. Raise/lower the data with the 3 and 6 buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the MUTING button. (The display changes to WRITE.)
5. Execute the writing with the 0 button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

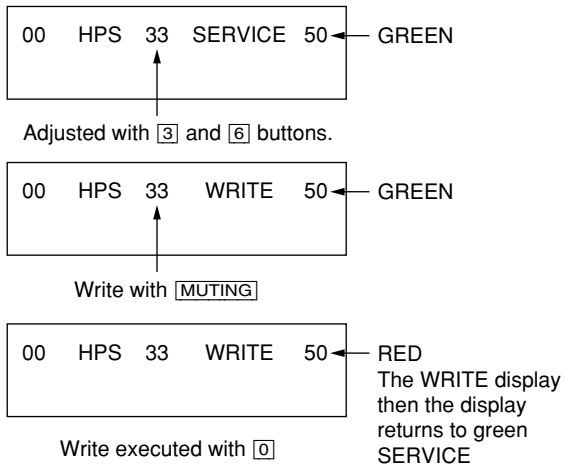
00 HPS 33 SERVICE 50
GREEN
Adjusted with 3 and 6 buttons.
00 HPS 33 WRITE 50
GREEN
Write with MUTING
00 HPS 33 WRITE 50
RED
The WRITE display then the display returns to green SERVICE
Write executed with 0

Use the same method for all Items. Use 1 and 4 to select the adjustment item, use 3 and 6 to adjust, write with MUTING, then execute the write with 0.

Note : 1. In WRITE, the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

Functionality		Init.	Range	Function	Table & Note	Device Name (Slave Address)													
No.	Name						Common	50	60	SECAM	NTSC	PAL	TV	Video	Teletext	M System	Non-M System	Dynamic	Others
00	HPS	2A	3F	H Position	50/60Hz	TDA8843/44(8A)		2A	2A										
01	HSZ	1F	3F	H Size	50/60Hz			1F	1F										
02	PAP	1F	3F	Pin Amplitude	50/60Hz			1F	1F										
03	CPN	1F	3F	Corner Pin	50/60Hz			1F	1F										
04	TLT	1F	3F	Tilt	50/60Hz			1F	1F										
05	VSL	26	3F	V Slope	50/60Hz			**26**	**26**										
06	VAP	0F	3F	V Amplitude	50/60Hz			0F	0F										
07	SCO	0F	3F	S Correction	50/60Hz			0F	0F										
08	VPS	1F	3F	V Shift	50/60Hz			1F	1F										
09	VZM	19	3F	Vertical Zoom			**19**												
0A	VSC	1F	3F	Vertical Scroll	50/60Hz			**1F**	**1F**										
0B	RDR	1F	3F	R Drive	Dynamic/Others													**1F**	**24**
0C	GDR	25	3F	G Drive	Dynamic/Others													25	25
0D	BDR	25	3F	B Drive	Dynamic/Others													25	20
0E	SBR	58	7F	Sub Brightness			58												
0F	PMX	20	3F	Picture Maximum Data	TV/Video/Teletext								20	20	20				
10	PMI	04	3F	Picture Maximum Data			**04**												
11	SHU	07	0F	Sub Hue	TV/Video								07	09					
12	SSH	01	03	Sub Sharpness	TV/Video								**01**	**03**					
13	SC1	20	3F	Sub Color Lower	50/60Hz			20	1C										
14	SC2	08	3F	Sub Color Higher	50/60Hz			**08**	**0B**										
15	FO	00	03	01 Time Constant	TV/Video/Teletext								**00**	**00**	**00**				
16	AGT	00	3F	AGC Take Over	TV/Video/Teletext								00	00	00				
17	VSW	01	01	Video Mute Switch	TV/Video/Teletext								**00**	**01**	**00**				
18	FOR	03	03	Forced Field Frequency			**03**												
19	DL	00	01	De-interlace			**00**												
1A	POC	00	01	Fixed 01 Synchro. Mode			**00**												
1B	COR	01	01	Noise Coring	TV/Video/Teletext								**01**	**00**	**00**				
1C	RBL	00	01	RGB Blanking	TV/Video/Teletext								**00**	**00**	**00**				
1D	YDL	0A	0F	Y-Delay	PAL/NTSC/SECAM					**06**	**0C**	**0A**							
1E	VP1	00	FF	Extra Bits (see specified pages)			**00**												
1F	VP2	01	FF	Extra Bits (see specified pages)			**01**												
20	VP3	0F	FF	Extra Bits (see specified pages)			**0F**												
21	WST	15	FF	W/G Stereo Threshold		MSP3417G(80)	**15**												
22	WBT	EC	FF	W/G Bilingual Threshold			**EC**												
23	WLL	05	FF	W/G Monaural Threshold			**05**												
24	WAC	01	0F	W/G Agreement Threshold			**01**												
25	WDL	30	FF	W/G Search Delay			**30**												

Adjustment Item Table

Functionality		Init.	Range	Function	Table & Note	Device Name (Slave Address)												
No.	Name						Common	50	60	SECAM	NTSC	PAL	TV	Video	Teletext	M System	Non-M System	Dynamic	Others
26	NDL	20	FF	NICAM Search Delay			**20**												
27	SDL	10	FF	Stereo Status Read Delay			**10**												
28	AGC	01	01	AGC Switch auto/constant			**01**												
29	REL	28	3F	AGC Gain at Constant Mode			**28**												
2A	CRM	00	01	Carrier Muting on/off			**00**												
2B	ACO	01	01	Audio Clock-out on/off			**01**												
2C	FP	1B	7F	FM Prescale for B/G, I, D/K			**1B**												
2D	FPM	32	7F	FM Prescale for M			**32**												
2E	FH	36	7F	FM Prescale for HDEV (non-M)			**36**												
2F	FHM	65	7F	FM Prescale for HDEV (M)			**65**												
30	WGP	1C	7F	W/G Prescale			**1C**												
31	NIP	7F	7F	NICAM Prescale			**7F**												
32	ERR	50	FF	Auto FM Switch Threshold			**50**												
33	VOL	73	7F	DFP Volume Maximum			**73**												
34	ING	00	0F	Input Gain	M System/non-M/Video	TDA7438(88)								00		00	00		
35	VOM	00	3F	Volume Output Gain	M System only		00												
36	BCS	02	03	Bass Center Shift			**02**												
37	TCS	03	03	Treble Center Shift			**03**												
38	TXH	2A	FF	Horizontal Display Position		SAA5264(58)	**2A**												
39	TXV	27	3F	Vertical Display Position (line offset from V-sync)			**27**												
3A	THD	00	7F	H-sync Active Edge Shift			**00**												
3B	TVD	3F	7F	V-sync Active Edge Shift			**3F**												
3C	HPL	01	01	H-sync Polarity Configuration	00 : Positive, 01 : Negative		**01**												
3D	VPL	01	01	V-sync Polarity Configuration	00 : Positive, 01 : Negative		**01**												
3E	FPL	01	01	Field Polarity Configuration	00 : V-sync second half line, 01 : V-sync first half line		**01**												
3F	FMD	00	00	Force Mode	00 : Auto, 01 : Default, 02 : Fastext, 03 : Top Mode		**00**												
40	TBR	08	0F	Set Teletext RGB Brightness			**08**												
41	NOP	01	0F	National Option Table Configuration			**01**												
42	TCH	01	03	Twisted Character Set Configuration			**01**												
43	BKP	00	3F	Picture Data at Blanking OFF		Other Control	**00**												
44	ODL	10	FF	Power ON Delay			**10**												
45	OSH	0A	3F	OSD H Position			0A												
46	TSY	00	03	TV System at Auto Preset	00 : B/G, 01 : I, 02 : D/K, 03 : M		**00**												
47	DKS	01	01	D/K Stereo enable/disable			**01**												
48	MUT	00	01	Muting on/off at No Sync			**00**												
49	ABL	01	01	Bright ABL Switch			**01**												
4A	SCM	01	01	SECAM Trap active/inactive			**01**												
4B	SLS	01	01	Activate SL.OR.IFI Sync			**01**												
4C	SSV	02	07	Space Sound Volume Step Up			**02**												
4D	VPW	35	7F	Timer of Video Processor start up wait			**35**												
4E	OP1	2F	FF	Optional Flags 0 (see specified pages)			2E												
4F	OP2	0F	FF	Optional Flags 1 (see specified pages)			8C												
50	OP3	00	FF	Optional Flags 2 (see specified pages)			00												

NOTE

- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
  In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION

No. 1E VP1

Item	-	-	BCO	OSO	SBL	HBL	FCO	FFI
KV-TG21M20	*	*	0	0	0	0	0	0

BCO	Switch-on behaviour 1=Switch -on of picture via internal delay 0=Without delay	00(4)
OSO	1=Switch off in vertical overscan 0=Switch-off undefind	18(7)
SBL	Service blanking Mode 1= on 0= off	0B(7)
HBL	RGB Blanking Mode 1 = wide blanking, 0 = normal blanking	02(7)
FCO	Forced Color-on 1=no colour killer 0=normal colour killer function	1B(0)
FFI	Fast filler IF-PLL 1=increased time constant 0=normal time constant	1A(1)

No. 1F VP2

Item	-	-	MAT	DS	DSA	EBS	BLS	BKS
KV-TG21M20	*	*	0	0	0	0	0	1

MAT	PAL-SECAM-/NTSC Matrix 1 =PAL matrix, 0=adapted to standard	0E(7)
DS	Dynamic skin control on/off 1= on 0= off	1A(3)
DSA	Dynamic skin control angle 1=correction angle 117 degrees 0=correction angle 123 degrees	1A(2)
EBS	Extended Blue Stretch 1= on 0= off	1A(0)
BLS	Blue stretch 1= on 0= off	18(4)
BKS	Black stretch 1= on 0= off	18(3)

No. 20 VP3

Item	BB	AKB	BPS	CB	ACL	CL2	CL1	CL0
KV-TG21M20	0	0	0	0	1	0	0	0

BB	Blue back when no video signal is identified 1= on 0= off	18(0)
AKB	Black current stabilisation 1=not active 0=active	02(6)
BPS	Bypass of chroma base-band delay line 1=bypassed 0=active	19(6)
CB	Chroma bandpass centre frequency 1= 1.1x Fsc 0=Fsc	18(5)
ACL	Automatic colour limiting 1= active 0= not active	19(5)

CL2	CL1	CL0	Cathode Drive amplitude
0	0	0	57V
0	0	1	63V
0	1	0	70V
0	1	1	77V
1	0	0	84V
1	0	1	91V
1	1	0	99V
1	1	1	107V

No. 4E OP1

Item	HA ME VO1	AV input		COMB	B/G	I	D/K	M
KV-TG21M20	0	0	1	0	1	1	1	0

HA ME VO1 — Tone controller volume curve setting 1 = for HA(ME) 0 = for HA(GE)

AV Input — 00 = no AV Input model 01 = 1 AV Input model
10 = 2 AV Input model 11 = Not available

COMB (for NTSC model) — 1 = Enable external comb filter, 0 =Disable external comb filter

Other optional function will be enabled if the corresponding bit is set to 1.

No. 4F OP2

Item	No NICAM	US ST	HDEV	1 V-Curve	XTAL SEL		SECAM	2nd Lang.
KV-TG21M20	0	0	0	0	1	1	0	0

No NICAM — 1 = NICAM search is disable in any TV system, 0 = NICAM search operates

US ST — (Reserved for NTSC model)

1 V-Curve (for monaural model) — 1 = using common volume curve for every mode and every TV system
0 = another volume curve available for video mode and M system

XTAL SEL — 00 = only 4.43 XTAL 01 = only 3.58 XTAL
10 = not used 11 = both 4.43 and 3.58 XTAL

Other optional function will be enabled if the corresponding bit is set to 1.

No. 50 OP3

Item	PIC Rot.	Auto TV Sys.	No Bal.	SPC SOUND	Korean ST	VM	H.K. Bil.	Thai Bil.
KV-TG21M20	0	0	0	0	0	0	0	0

No Bal. (for AV stereo model) — 1 = no balance in analog select items, 0 = balance included

SPC SOUND — 1 = Space Sound available, 0 = not available

Korean ST — (Reserved for NTSC model)

H.K. Bil. (for monaural model) — 1 = NICAM bilingual available (No NICAM stereo), 0 = not available

Other optional function will be enable if the corresponding bit is set to 1.

OPERATION GUIDE

SERVICE MODE

How to set up new NVM (or initialize already written one)
(1) AC ON
(2) Enter Service Mode - describing below how to enter
(3) Push the commander button “5” and “0” sequentially (only set initial data into RAM, but not write them into NVM yet)
(4) Push the commander button “2” and “0” sequentially (copy the data into all NVM area - all wide modes and 50/60Hz respectively)
(5) Push the commander button “8” and “0” sequentially (initialize user data, select program 1 and exit Service Mode)
(6) Select TV system and execute Auto Preset

How to enter Service Mode
- At power ON, push the commander button “test” and “TV ON” sequentially
- At stand-by, push the commander button “display”, “5”, “vol +” and “power” sequentially

How to exit Service Mode
- Push the commander button “other ON” or power (AC) OFF

How to increment/decrement items and data
- Items : push the commander button “1” / “4”
- Data : push the commander button “3” / “6” (not write into NVM)

Other operations
- Write data into NVM - push the commander button “mute” and “0” sequentially
- Read data from NVM - push the commander button “7” and “0” sequentially
- Copy 50Hz data into 60Hz area - push the commander button “display” and “0” sequentially

SELF DIAGNOSIS MODE

How to enter Self Diagnosis Mode
- At stand-by, push the commander button “display”, “5”, “vol-” and “power” sequentially

How to exit Self Diagnosis Mode
- Push the commander button “other ON” or power (AC) OFF

Other operations
- Clear data and Write into NVM - push the commander button “8” and “0” sequentially

HOTEL TV MODE

How to enter Hotel TV Mode ON stage
- At stand-by, push the commander button “display”, “MUTE”, “vol +” and “power” sequentially
- The Hotel TV setup display, where the maximum level of the volume can be applied (=35 or above)
- Write data into NVM - push the commander button “mute” and “0” sequentially

How to enter Hotel TV Mode OFF stage
- At stand-by, push the commander button “display”, “MUTE”, “vol -” and “power” sequentially
- Write data into NVM - push the commander button “mute” and “0” sequentially

Modification Note
The item including the new addition is yellow.

4-3. PICTURE QUALITY ADJUSTMENT

SUB COLOR ADJUSTMENT

1. Select Video.
2. Input a PAL color-bar.
3. Set to the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Set to Service Mode and select 13 'SC1' with [1] and [4] of the commander then adjust to VB2=VB3=VB4 with [3] and [6].
6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust 13 'SC1' as step 2 to 5 when receiving NTSC color-bar.

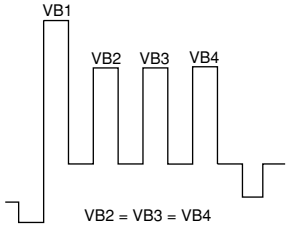

VB2 = VB3 = VB4 (Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video.
2. Input a NTSC 3.58, color-bar into Video/TV mode.
3. Set the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Select 11"SHU" with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6].

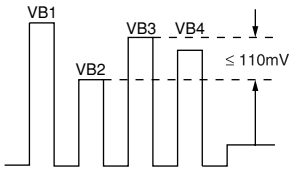

VB1 = VB2 = VB3 = VB4

The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line. Ideal difference level between VB2 and VB3 should be within ± 110mV.

6. Press [MUTING] → [0] of the commander to write the data.
7. Select TV channel with NTSC 3.58 and repeat 3 to 5.
8. Press [MUTING] → [0] of the commander to write the data.
9. Single system model with NTSC 4.43, select TV channel with NTSC 4.43 and repeat 3 to 5.

4-4. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set to Service mode.
2. Input PAL color bar.
3. Using the [1] and [4] button, select category GEO (Service Mode).
4. Raise/lower the data using the [3] and [6] buttons.
   Select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMPLITUDE
	03	CPN	CORNER PIN
	04	TLT	TILT
	05	VSL	V SLOPE
	06	VAP	VERTICAL AMPLITUDE
	07	SCO	S CORRECTION
	08	VPS	V SHIFT

NORMAL MODE (60Hz)

5. Input 525/60Hz signal.
6. Using the [1] and [4] buttons select category GEO (Service Mode).
7. Select and adjust the following items to obtain obtimum image.
   Raise/lower the data with the [3] and [6] buttons.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMPLITUDE
	03	CPN	CORNER PIN
	04	TLT	TILT
	05	VSL	V SLOPE
	06	VAP	VERTICAL AMPLITUDE
	07	SCO	S CORRECTION
	08	VPS	V SHIFT

4-5. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the fine adjustment.
   Write the data per each item number ([MUTING] +[0]).
4. Select item numbers 4E 'OP1', 4F 'OP2', 50 'OP3' and respectively set the bit per model with command buttons [3] and [6] .
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory. (This will also cancel Service Mode.)

4-6. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 08

00 HPS (H POSITION)



01 HSZ (H SIZE)



02 PAP (PIN AMPLITUDE)



03 CPN (CORNER PIN)



04 TLT (TILT)



05 VSL (V SLOPE)



06 VAP (V AMPLITUDE)



07 SCO (S CORRECTION)



08 VPS (V SHIFT)



SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

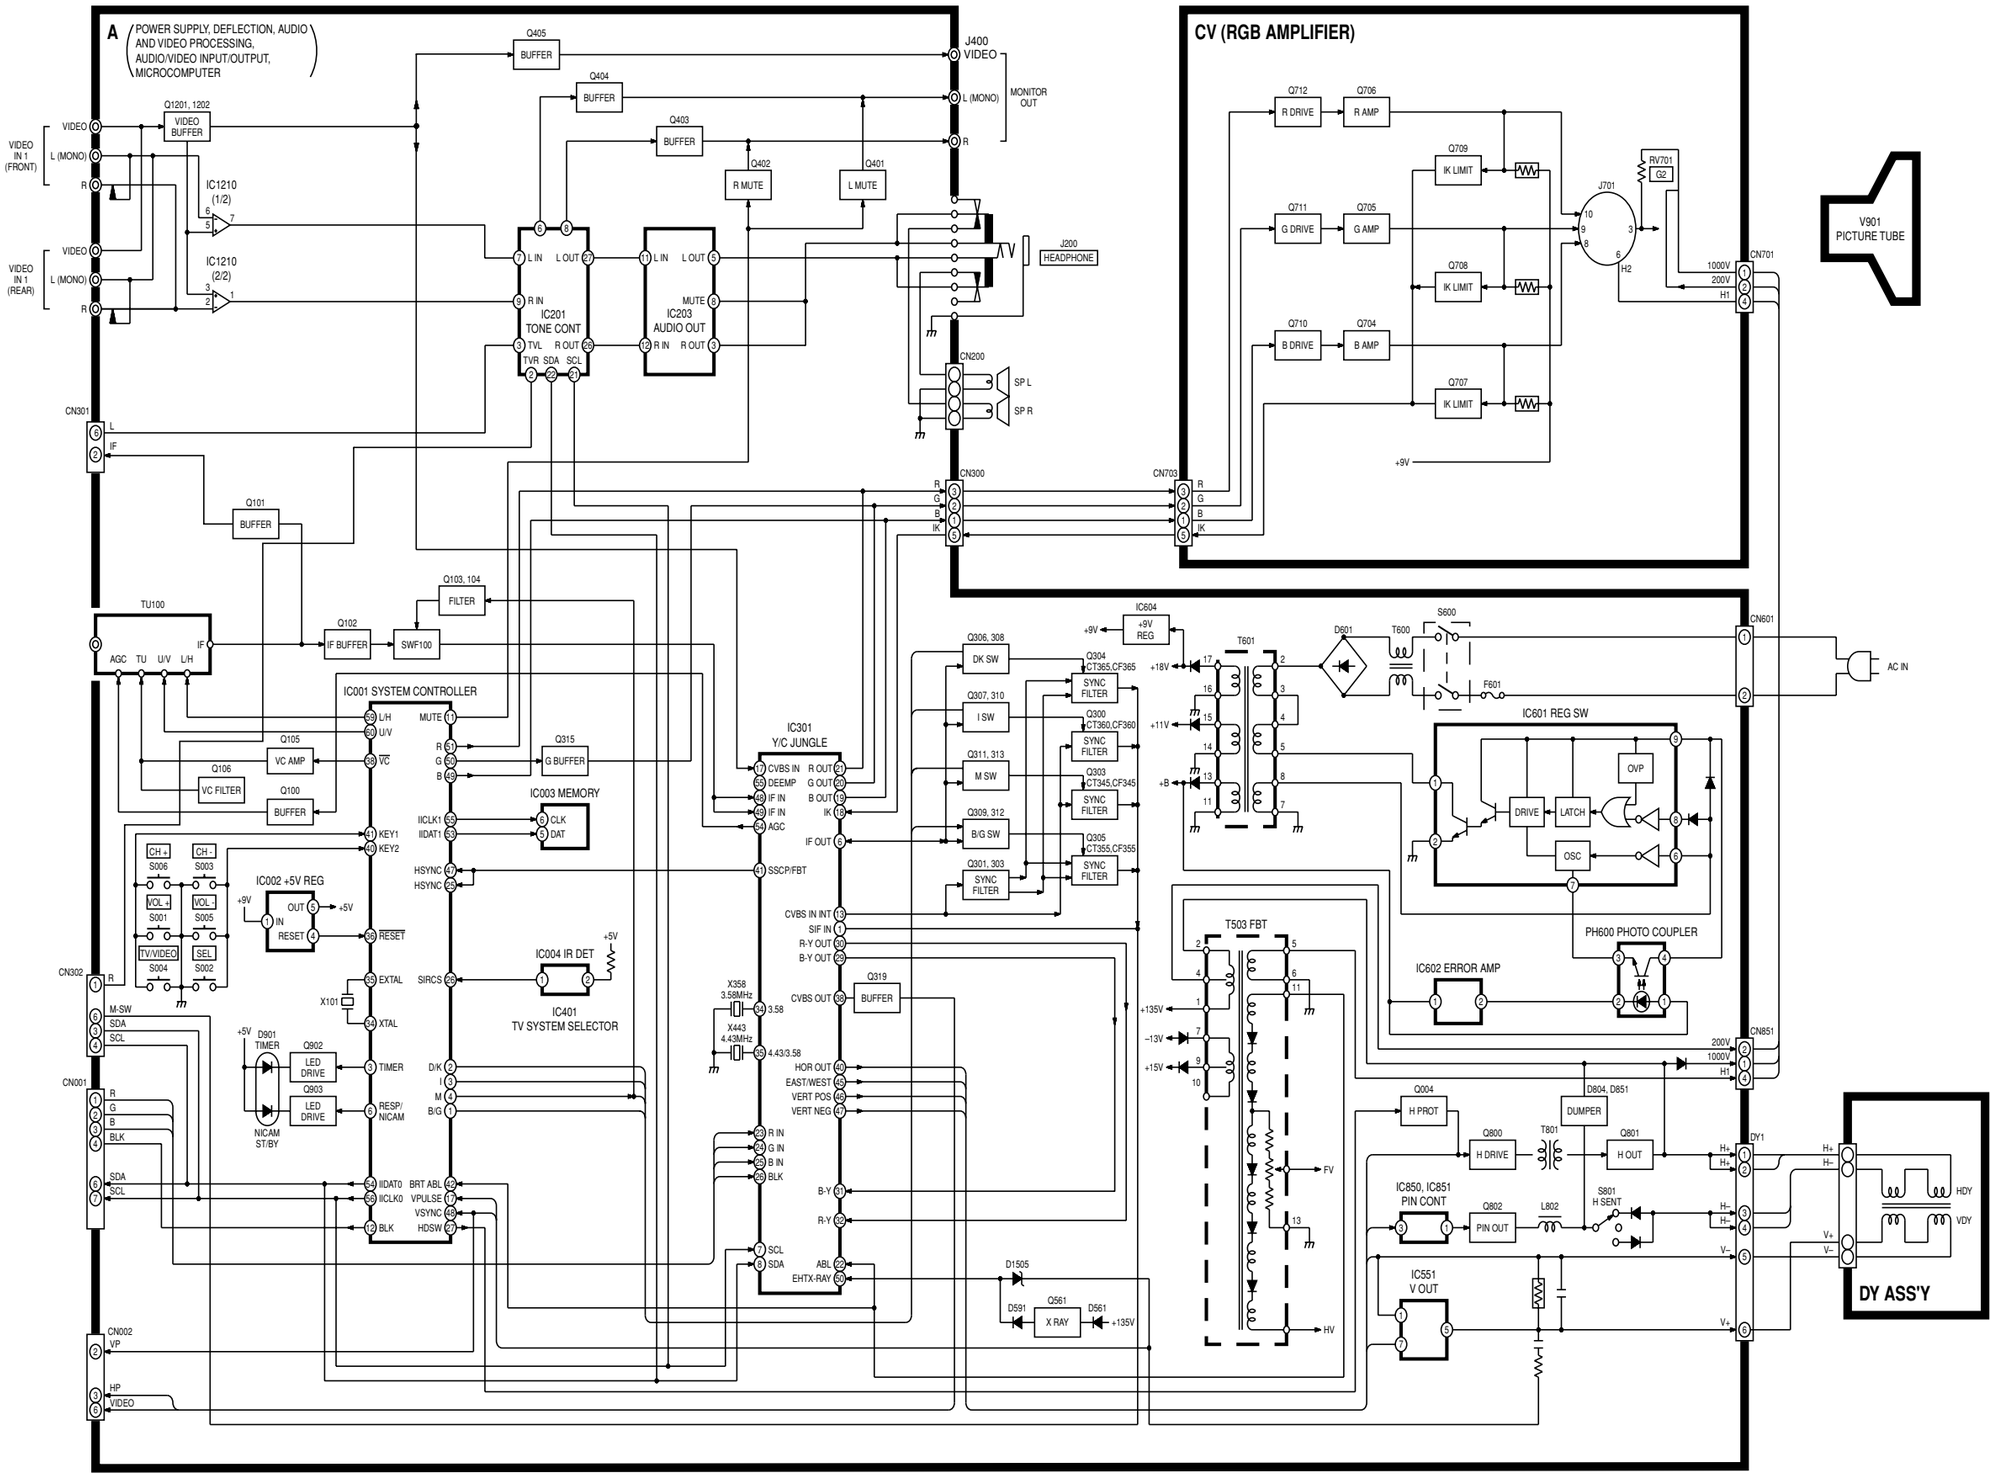

5-2. CIRCUIT BOARDS LOCATION

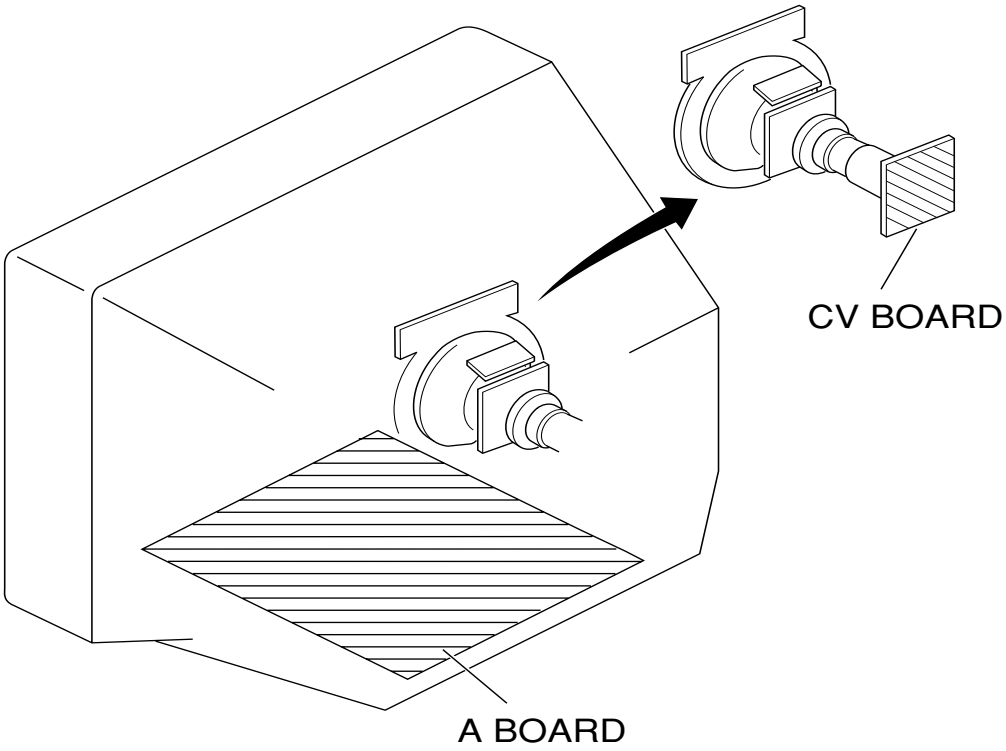

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
  no mark : COMMON
  ( ) : PAL
  [ ] : NTSC 3.58
- **Readings are taken with a 10 MΩ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in Volt.**
- **✻ : Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B +bus.**
- **: B –bus.**
- **: signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

(1) A Board Schematic Diagram

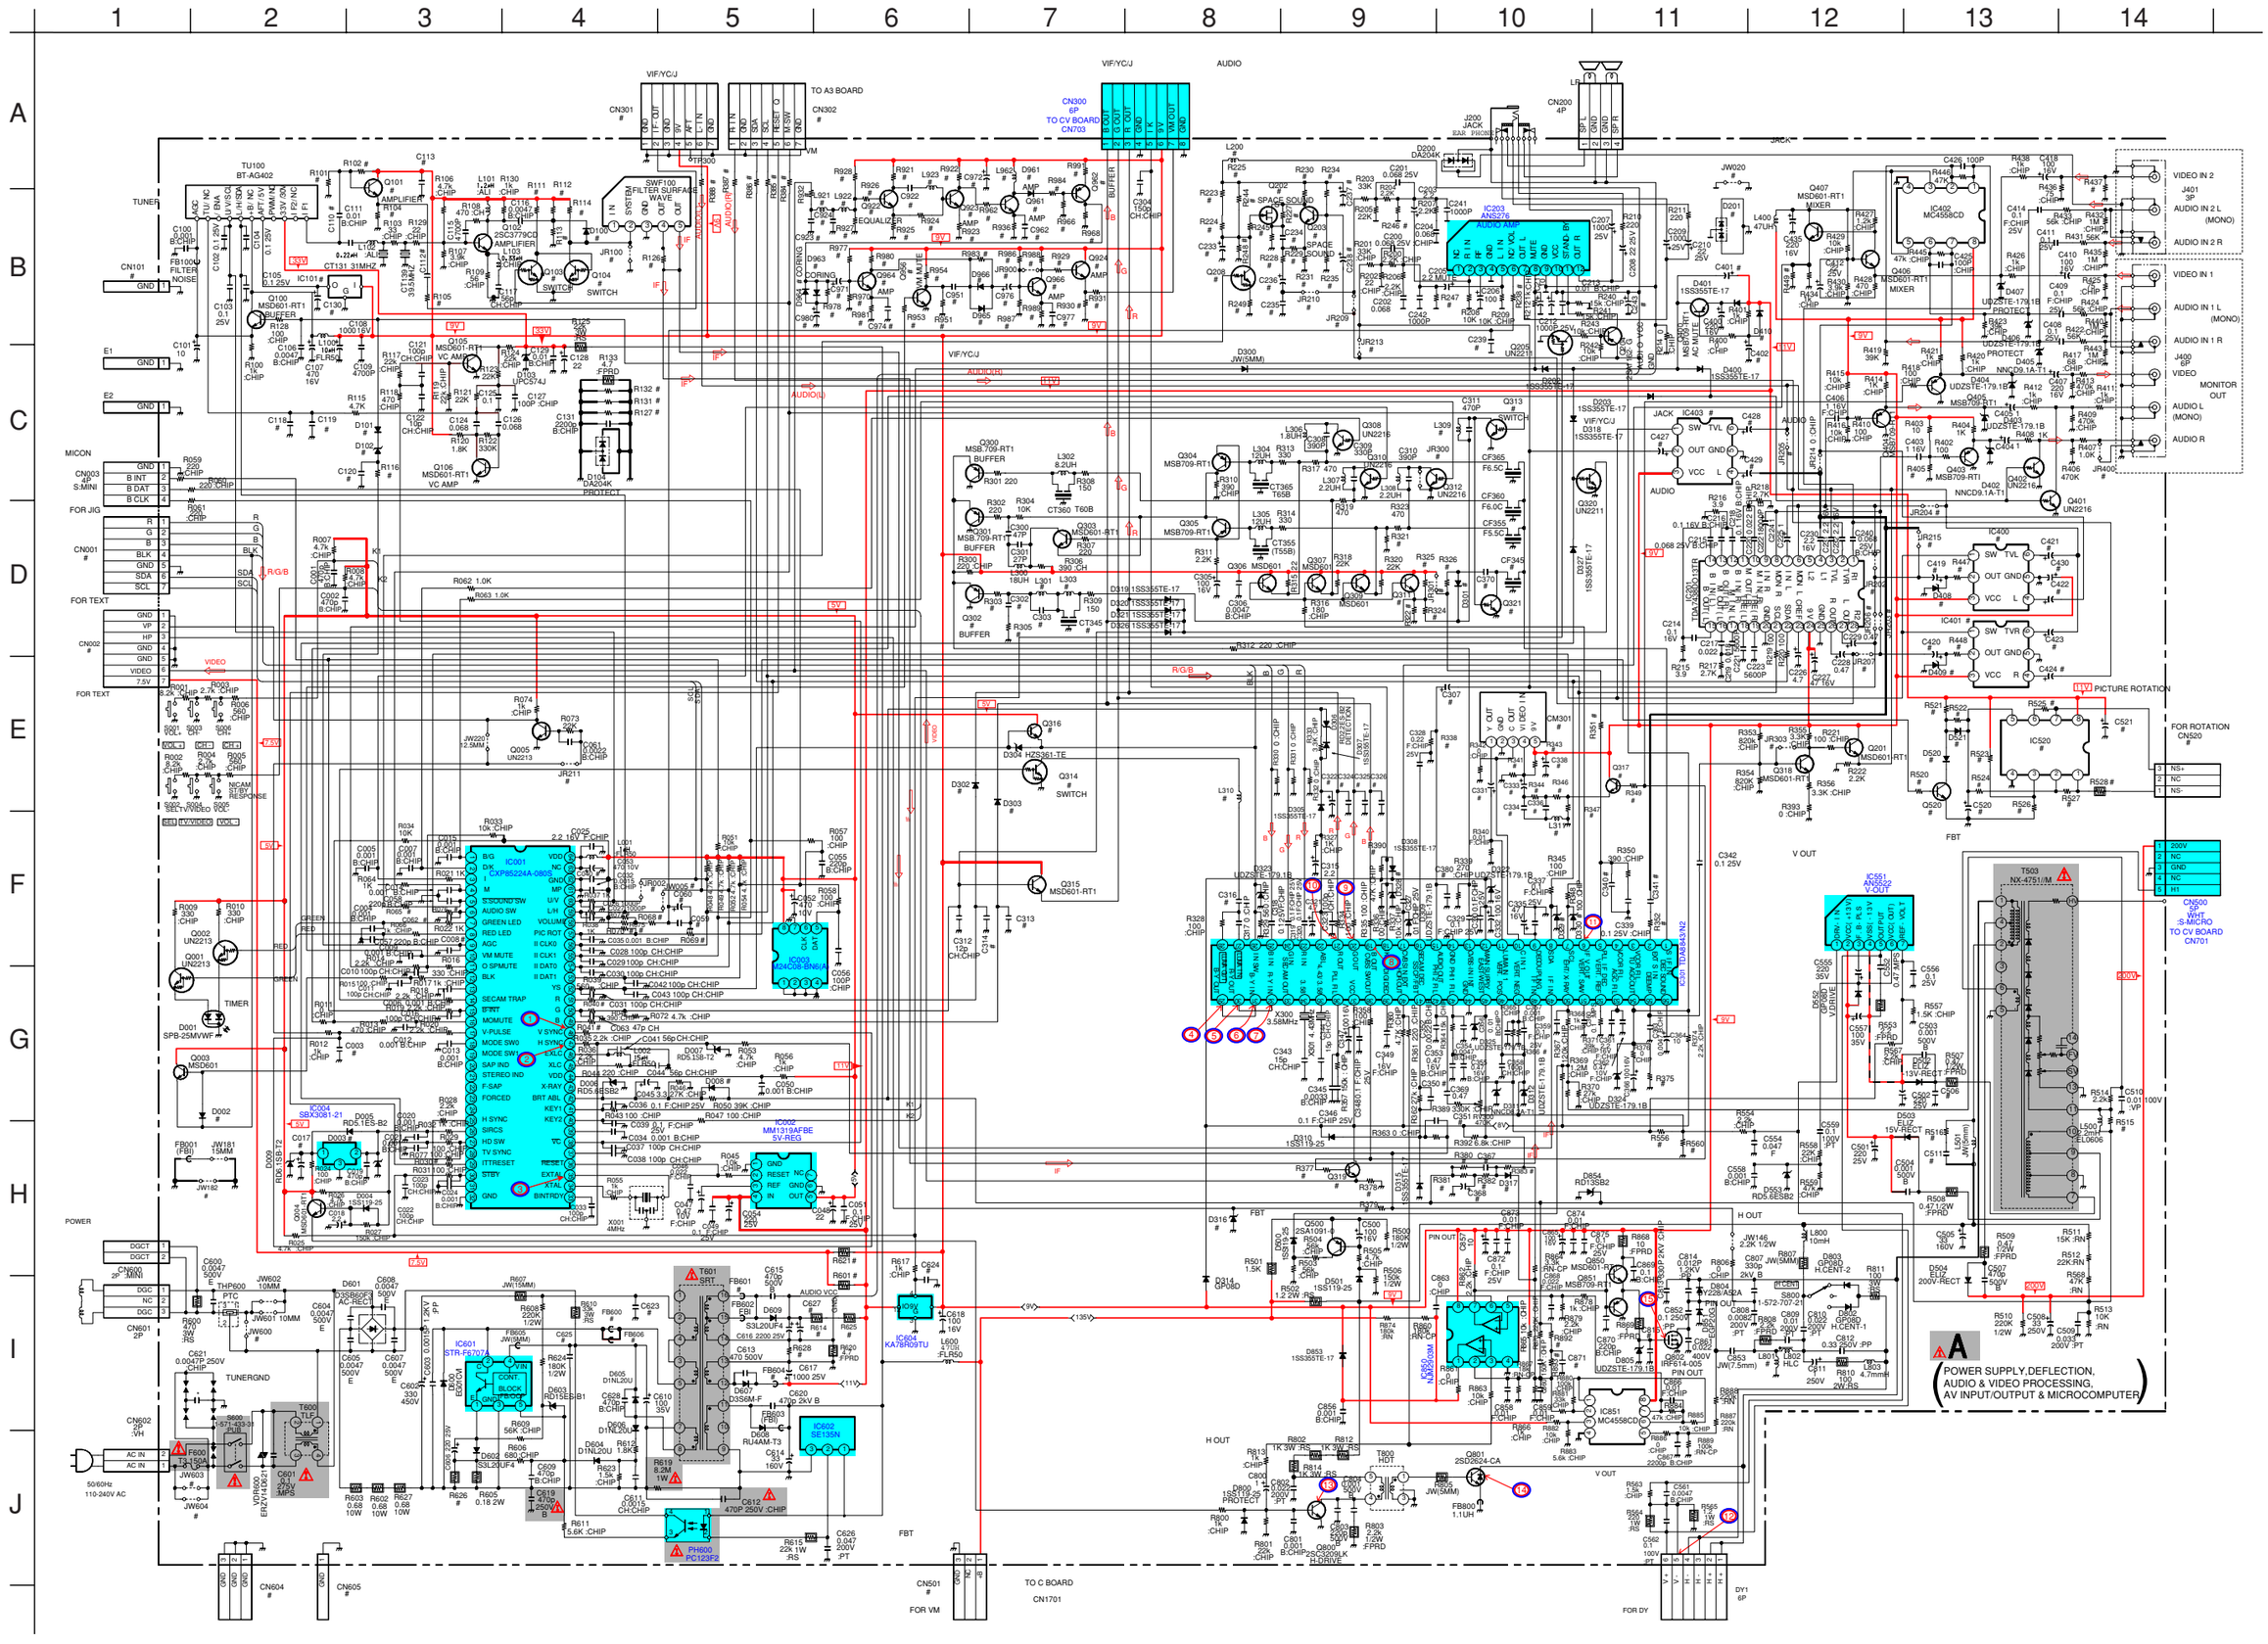
1 2 3 4 5 6 7 8 9 10 11 12 13 14
A B C D E F G H I J
IC001 CXP85224A-080S
IC002 MM1319AFBE 5V-REG
IC003 MD4C08-BN6
IC004 SBX3081-21
IC101
IC201 MC44555CD
IC202 MC44555CD
IC203 AN5276 AUDIO AMP
IC400
IC401
IC520
IC551 AN5522 V OUT
IC601 STR-F6707A
IC602 SE135N
IC603 KA78R09TU
IC604 KA78R07TU
IC650 NJM5534M
IC851 MC4558CD
TU100 BT-AG402
TUNER
CN100 6P TO CV BOARD CN703
CN101
CN301
CN302 TO A3 BOARD
CN303 TO C BOARD CN1701
CN501 FOR VM
CN502 FOR DY
CN520 FOR ROTATION
CN600 2P :MINI
CN601 2P
CN602 2P :VH
CN603 FOR JIG
CN604
CN605
CN606 FOR TEXT
CN607 FOR TEXT
CN608 4P
CN609 4P
CN610 4P
CN611 4P
CN612 4P
CN613 4P
CN614 4P
CN615 4P
CN616 4P
CN617 4P
CN618 4P
CN619 4P
CN620 4P
CN621 4P
CN622 4P
CN623 4P
CN624 4P
CN625 4P
CN626 4P
CN627 4P
CN628 4P
CN629 4P
CN630 4P
CN631 4P
CN632 4P
CN633 4P
CN634 4P
CN635 4P
CN636 4P
CN637 4P
CN638 4P
CN639 4P
CN640 4P
CN641 4P
CN642 4P
CN643 4P
CN644 4P
CN645 4P
CN646 4P
CN647 4P
CN648 4P
CN649 4P
CN650 4P
CN651 4P
CN652 4P
CN653 4P
CN654 4P
CN655 4P
CN656 4P
CN657 4P
CN658 4P
CN659 4P
CN660 4P
CN661 4P
CN662 4P
CN663 4P
CN664 4P
CN665 4P
CN666 4P
CN667 4P
CN668 4P
CN669 4P
CN670 4P
CN671 4P
CN672 4P
CN673 4P
CN674 4P
CN675 4P
CN676 4P
CN677 4P
CN678 4P
CN679 4P
CN680 4P
CN681 4P
CN682 4P
CN683 4P
CN684 4P
CN685 4P
CN686 4P
CN687 4P
CN688 4P
CN689 4P
CN690 4P
CN691 4P
CN692 4P
CN693 4P
CN694 4P
CN695 4P
CN696 4P
CN697 4P
CN698 4P
CN699 4P
CN700 4P
CN701 5P :MICRO TO CV BOARD
CN702 4P
CN703 4P
CN704 4P
CN705 4P
CN706 4P
CN707 4P
CN708 4P
CN709 4P
CN710 4P
CN711 4P
CN712 4P
CN713 4P
CN714 4P
CN715 4P
CN716 4P
CN717 4P
CN718 4P
CN719 4P
CN720 4P
CN721 4P

(2) CV Board Schematic Diagram

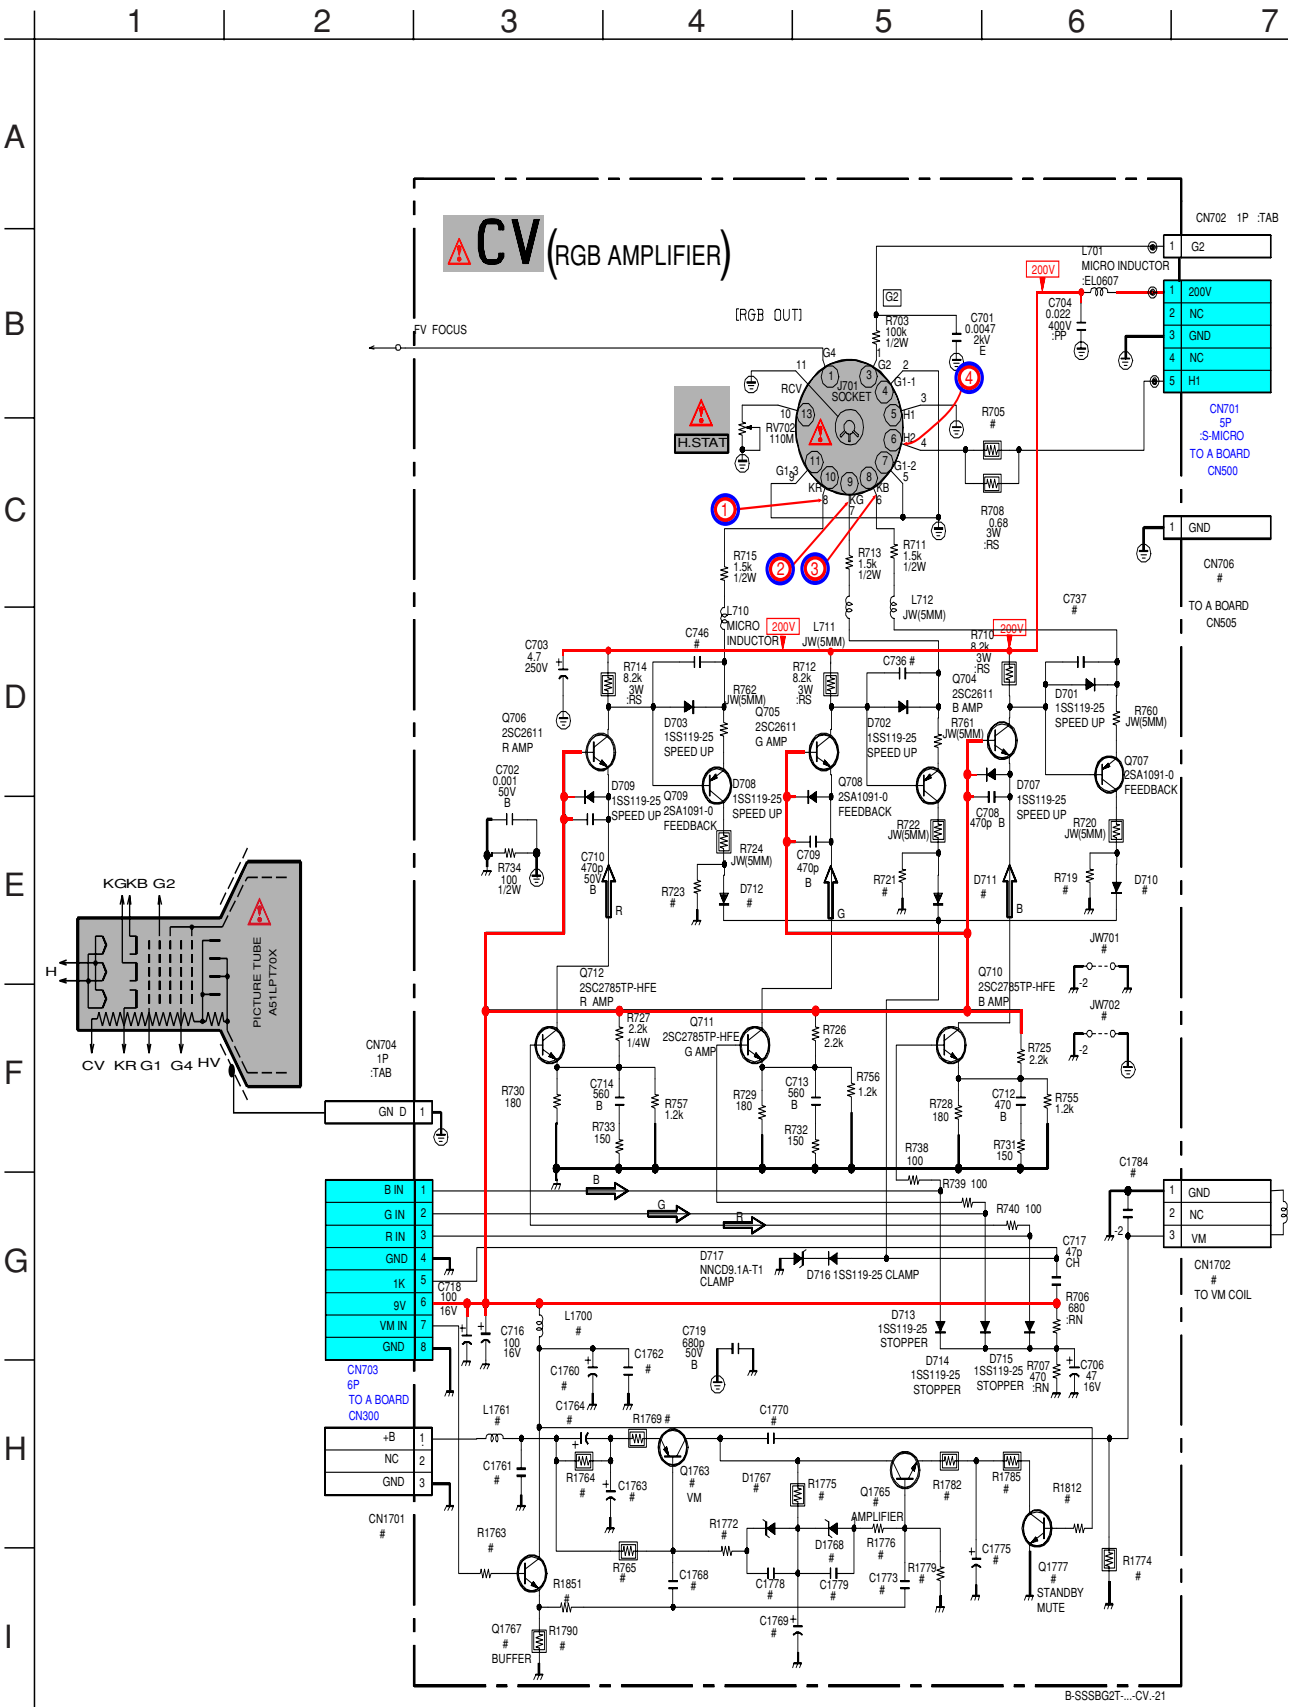

5-4. VOLTAGE MEASUREMENT

A BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
IC001	1	4.9
	2	0
	3	0
	4	0
	5	4.9
	6	(0) [4.8]
	7	0
	8	0
	9	4.9
	10	4.8
	11	0
	12	0
	13	0
	14	4.8
	15	4.9
	16	0
	17	0
	18	0
	19	(0.3) [0]
	20	0
	21	0
	22	0
	23	0
	24	0
	25	0.3
	26	4.0
	27	0
	28	0
	29	0
	30	4.9
	31	4.9
	32	0
	33	(0) [4.9]
	34	(0) [2.3]
	35	2.2
	36	4.9
	37	0
	38	(3.2) [4.8]
	39	0
	40	4.9
	41	4.9
	42	0
	43	0.3
	44	4.9
	45	4.9
	46	4.9
	47	(0.3) [0]
	48	0
	49	0
	50	0
	51	0
	52	0
	53	4.9
	54	4.8
	55	4.9
	56	4.8
	57	4.9
	58	(1.9) [2.1]
	59	8.8
	60	(0.2) [8.8]
	61	0
	62	0
	63	4.9
	64	4.9
IC002	1	0
	2	(4.9) [0]
	3	(4.8) [0]
	4	(15.5) [0]
	5	(4.9) [0]
	6	0
	7	0
IC003	1	0
	2	0
	3	0
	4	0
	5	(4.9) [0]
	6	(4.9) [0]
	7	0
	8	(4.9) [1.0]
IC004	1	4.8
	2	3.9
	3	0
IC101	I	*
	G	*
	O	*
IC203	1	0
	2	0
	3	15.6
	4	0
	5	0
	6	0
	7	7.4
	8	1.0
	9	0
	10	(16.7) [0]
	11	(8.3) [16.7]
	12	(0) [8.3]
IC301	1	0.4
	2	3.7
	3	0
	4	0
	5	2.4
	6	(3.0) [1.5]
	7	4.8
	8	4.8
	9	6.6
	10	1.1
	11	3.4
	12	8.1
	13	(3.8) [3.3]
	14	0
	15	3
	16	0
	17	3.8
	18	7.6
	19	2.4
	20	2.3
	21	2.6
	22	0
	23	(0) [3.4]
	24	0
	25	0
	26	0
	27	2.7
	28	2.7
	29	2.3
	30	2.3
	31	2.3
	32	2.3
	33	0.3
	34	2.4
	35	2.4
	36	4.8
	37	8.1
	38	2.4
	39	4.9
	40	1.5
	41	0.6
	42	2.9
	43	(3.9) [4.4]
	44	0
	45	(3.1) [2.5]
	46	1.3
	47	1.4
	48	4.6
	49	4.6
	50	1.5
	51	3.6
	52	3.8
	53	(4.4) [5.7]
	54	(3.8) [0.2]
	55	(2.9) [0]
	56	3.4
IC400	1	0
	2	4.4
	3	8.9
	4	0
	5	0
	6	5.1
IC520	1	0
	2	0
	3	0
	4	0
	5	0
	6	0
	7	0
	8	15.5
IC551	1	0.5
	2	13.3
	3	(12.1) [0]
	4	13.3
	5	(1.2) [0.3]
	6	13.5
	7	0.5
IC601	1	0.8
	2	(0.4) [1.3]
	3	(157) [171]
	4	11.0
	5	0
IC602	1	115
	2	(135) [0.01]
	3	(0) [135]
IC604	1	(0) [15.5]
	2	8.9
	3	0
	4	4.9
IC850	1	0.8
	2	0.8
	3	1.5
	4	0
	5	2.6
	6	1.6
	7	7.4
	8	8.9
IC1401	1	0
	2	0
	3	0
	4	0
	5	0
	6	0

➡ continue next page

A BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
PH600	1	134
	2	133
	3	3.6
	4	17.5
SWF100	1	0
	2	0
	3	0
	4	4.7
	5	4.7
Q001	B	0
	C	4.9
	E	0
Q002	B	0
	C	4.9
	E	0
Q003	B	*
	C	*
	E	*
Q004	B	0.1
	C	4.9
	E	0.1
Q100	B	(8.1) [0.2]
	C	8.9
	E	(7.5) [0]
Q101	B	*
	C	*
	E	*
Q102	B	3.7
	C	8.9
	E	3.1
Q103	B	*
	C	*
	E	*
Q104	B	*
	C	*
	E	*
Q105	B	0.6
	C	(6.6) [0]
	E	0
Q106	B	0.6
	C	4.1
	E	0
Q200	B	0
	C	0
	E	0
Q201	B	6
	C	8.9
	E	5.3
Q202	B	0
	C	0
	E	0
Q203	B	0
	C	0
	E	0
Q300	B	*
	C	*
	E	*
Q302	B	*
	C	*
	E	*
Q303	B	*
	C	*
	E	*
Q304	B	*
	C	*
	E	*
Q307	B	(2.9) [1.5]
	C	8.9
	E	(2.3) [0.9]
Q308	B	*
	C	*
	E	*
Q309	B	2.9
	C	0
	E	0
Q310	B	*
	C	*
	E	*
Q313	B	*
	C	*
	E	*
Q314	B	4
	C	0
	E	0
Q315	B	0
	C	8.9
	E	2.2
Q316	B	0
	C	0
	E	0
Q318	B	2.9
	C	6
	E	2.4
Q319	B	0
	C	8.1
	E	0
Q400	B	15.5
	C	0
	E	15.5
Q401	B	0
	C	0
	E	0
Q402	B	0
	C	0
	E	0
Q403	B	0.3
	C	0
	E	0
Q404	B	4.5
	C	0
	E	5.2
Q405	B	2.4
	C	8.9
	E	1.8
Q406	B	2.4
	C	(4.1) [5.0]
	E	1.8
Q407	B	5.0
	C	8.9
	E	4.3
Q408	B	3.5
	C	8.9
	E	2.9
Q409	B	0
	C	0
	E	0
Q500	B	133.5
	C	0
	E	133.5
Q800	B	0.1
	C	51.6
	E	0
Q801	B	0
	C	0
	E	0
Q802	B	(6.0) [-94.3]
	C	7
	E	0
Q850	B	7.4
	C	8.9
	E	7.0
Q851	B	7.4
	C	0
	E	7.0
Q852	B	6.7
	C	8.9
	E	6.1
Q853	B	0.3
	C	6.9
	E	0
Q854	B	0.9
	C	0.8
	E	0
Q922	B	*
	C	*
	E	*
Q923	B	*
	C	*
	E	*
Q924	B	*
	C	*
	E	*
Q954	B	*
	C	*
	E	*
Q956	B	*
	C	*
	E	*
Q961	B	*
	C	*
	E	*
Q962	B	*
	C	*
	E	*
Q966	B	*
	C	*
	E	*

CV BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
J701	G2	(135) [142]
	G1-1	0
	H1	0
	H2	0
	G1-2	0
	KB	133
	KG	(125) [145]
	KR	129
	G1-3	0
	E	0
Q705	B	8.9
	C	(144) [148]
	E	8.3
Q704	B	8.9
	C	137
	E	8.3
Q706	B	8.9
	C	(128) [132]
	E	8.3
Q707	B	136
	C	7.6
	E	132
Q708	B	(143) [146]
	C	7.0
	E	144
Q709	B	(127) [131]
	C	7.0
	E	128
Q710	B	2.5
	C	8.3
	E	1.8
Q711	B	2.3
	C	8.3
	E	1.6
Q712	B	2.6
	C	8.3
	E	1.9
Q1763	B	0
	C	0
	E	0
Q1765	B	0
	C	0
	E	0
Q1767	B	0
	C	0
	E	0
Q1777	B	0
	C	0
	E	0

5-5. WAVEFORMS

A BOARD WAVEFORM

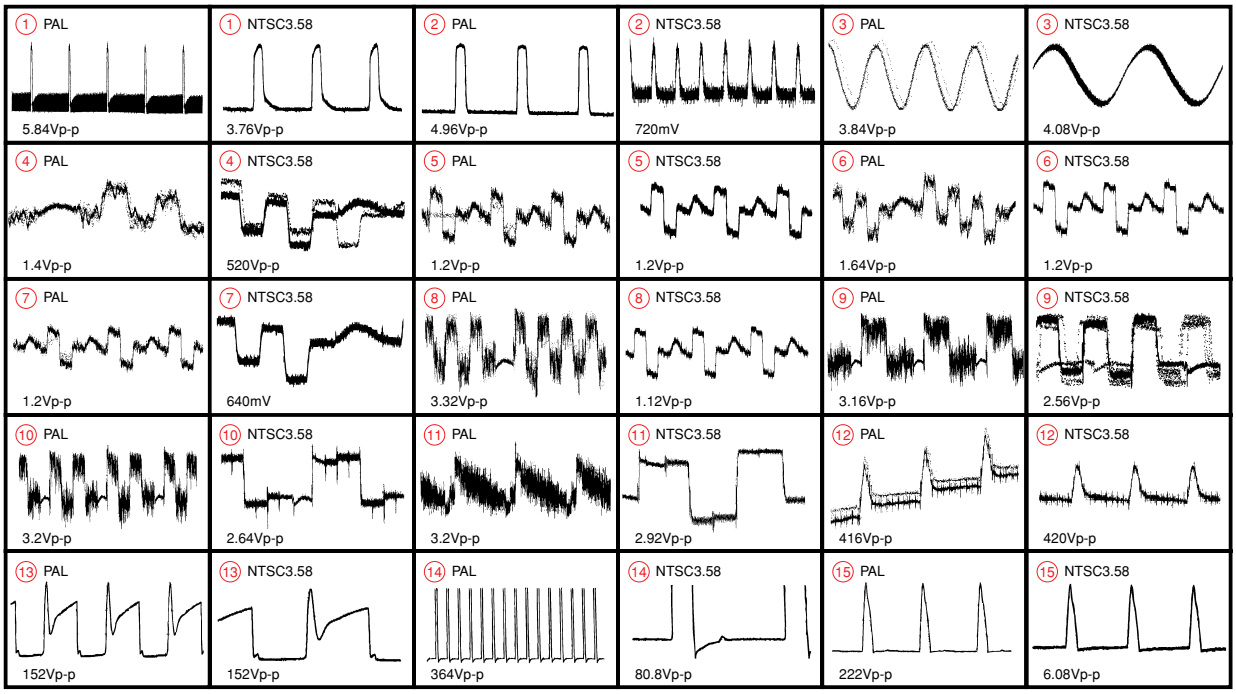

CV BOARD WAVEFORM

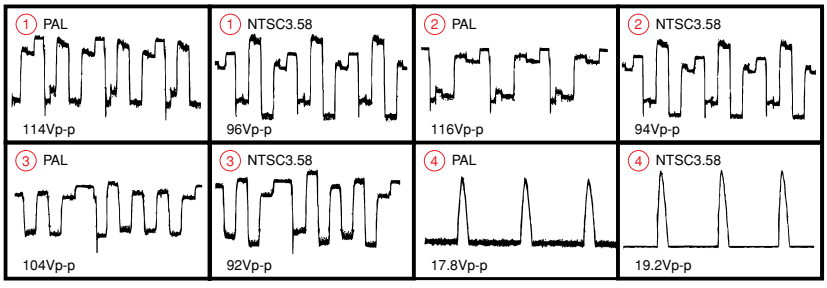

KV-TG21M20
RM-952

5-6. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS

A [POWER SUPPLY,DEFLECTION,
AUDIO AND VIDEO PROCESSING,
AUDIO/VIDEO INPUT/OUTPUT AND MICROCOMPUTER]

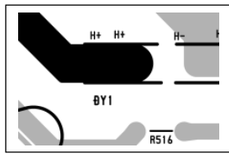

NOTE:
The circuit indicated at left contains high voltage of over 600 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

– A Board –

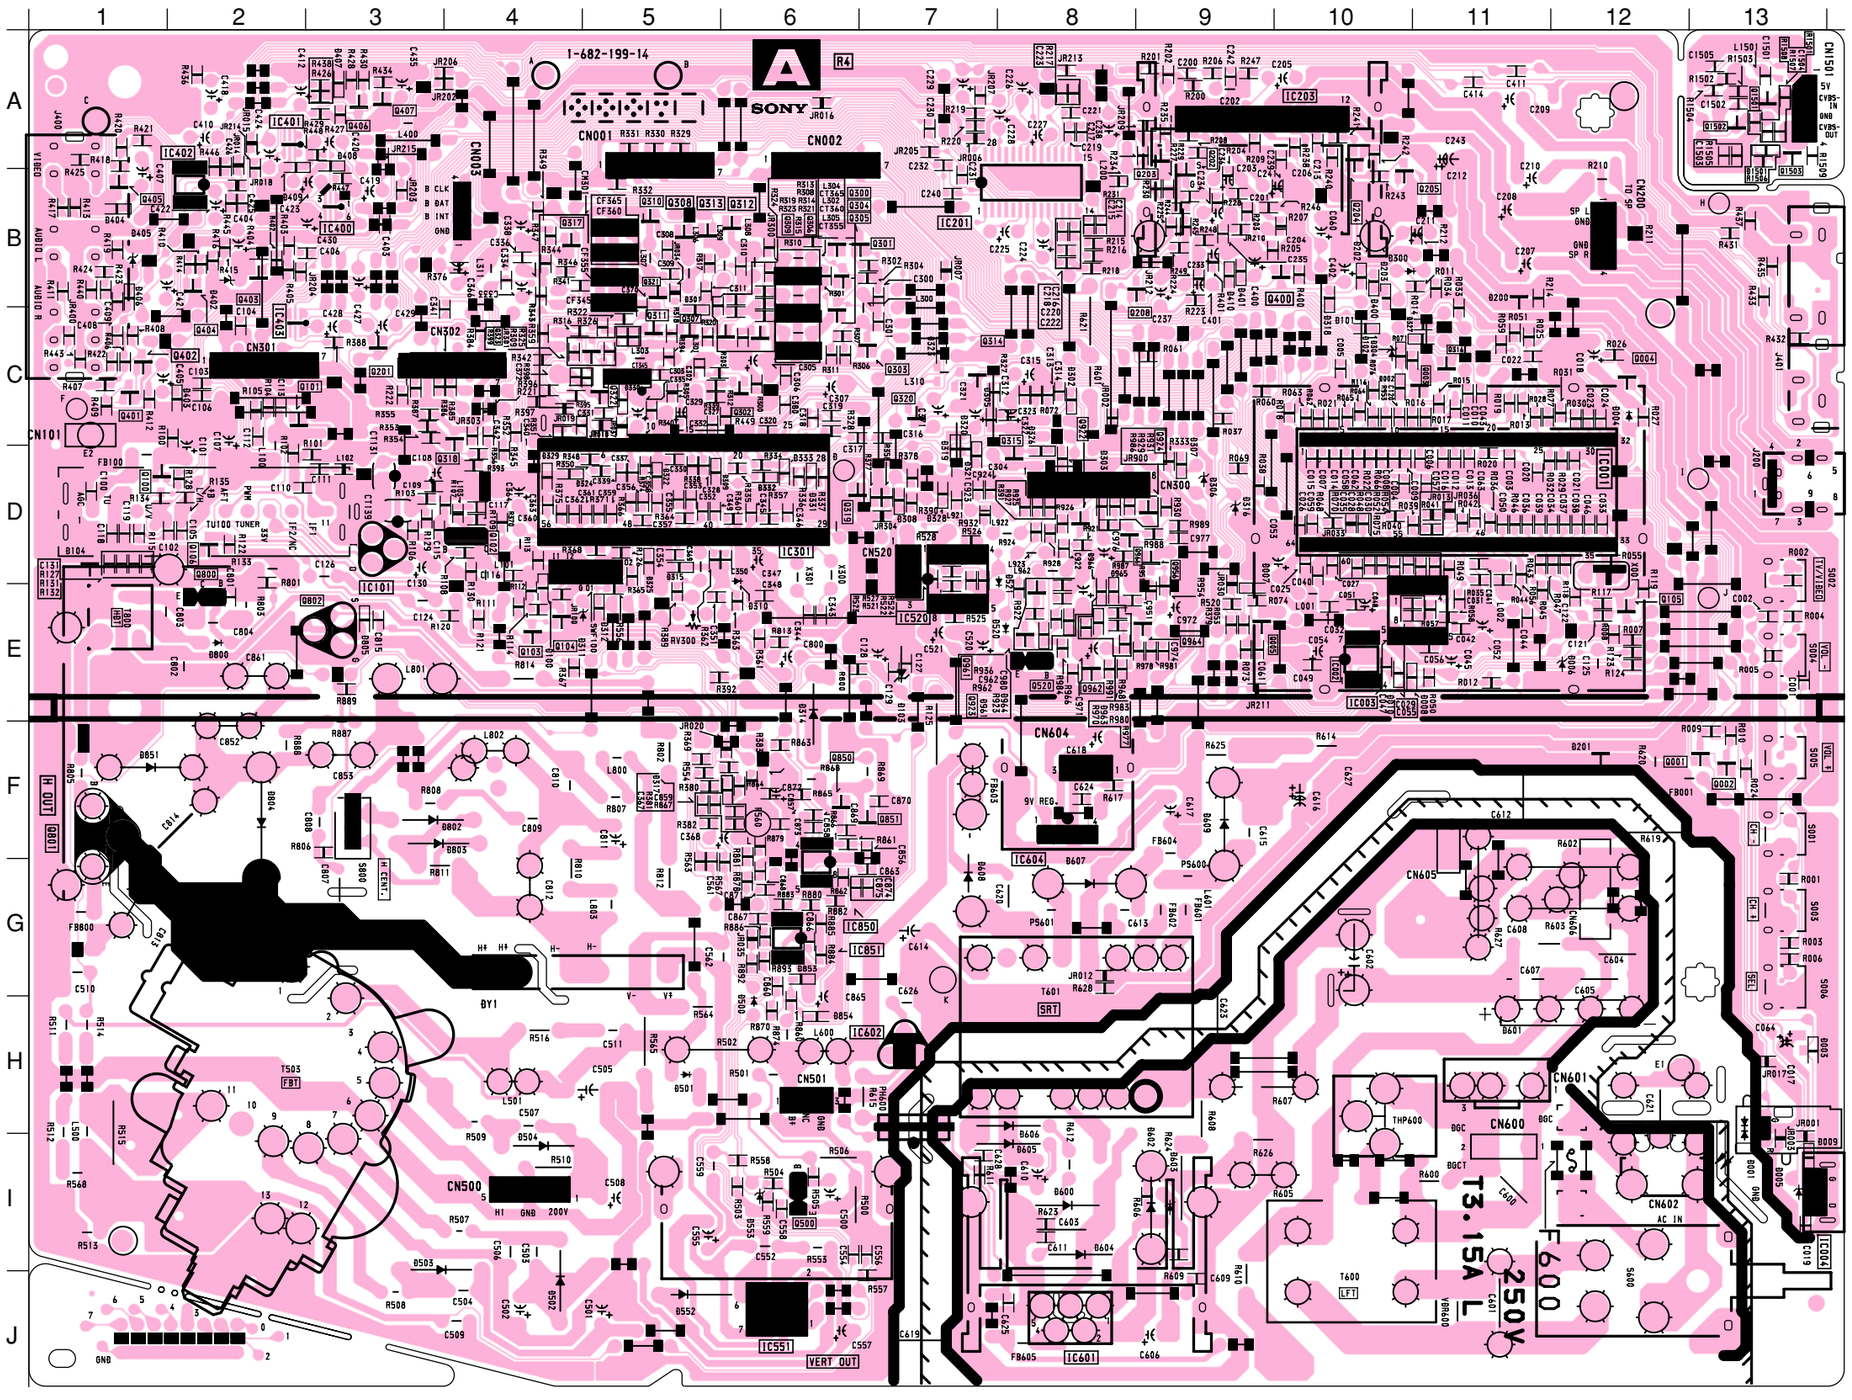

A BOARD

IC

IC001	D-12
IC002	E-10
IC003	E-10
IC004	I-13
IC101	D-3
IC201	B-7
IC203	A-10
IC301	D-6
IC400	B-3
IC401	A-2
IC402	A-2
IC403	C-2
IC520	E-7
IC551	J-6
IC601	J-8
IC602	H-7
IC604	G-8
IC850	G-6
IC851	G-6
PH600	H-7

TRANSISTOR

Q001	F-12
Q002	F-13
Q003	C-11
Q004	C-12
Q005	E-10
Q100	D-1
Q101	C-3
Q102	D-4
Q103	E-4
Q104	E-4
Q105	E-12
Q106	D-2
Q201	C-3
Q203	B-9
Q202	A-9
Q204	B-10
Q205	B-11
Q208	C-9
Q300	B-7
Q301	B-7
Q302	C-6
Q303	C-7
Q304	B-7
Q305	B-7
Q306	B-6
Q307	C-5
Q308	B-5
Q309	B-6
Q310	B-5
Q311	C-5
Q312	B-6
Q313	B-5
Q314	C-7
Q315	C-8
Q316	C-11
Q317	B-4
Q318	D-4
Q319	D-6
Q320	C-7
Q321	B-5
Q400	B-10
Q401	C-1
Q402	C-2
Q403	B-2
Q404	C-2
Q405	B-1
Q406	A-3
Q407	A-3
Q500	I-6
Q520	E-8
Q800	D-2
Q802	E-3
Q850	F-6
Q851	F-7
Q922	C-8
Q923	E-7
Q924	C-9
Q956	D-9
Q961	E-7
Q962	E-8
Q964	E-9
Q966	D-9

DIODE

D001	I-13
D002	C-10
D003	H-13
D004	C-12
D005	I-13
D006	E-12
D007	D-9
D008	E-11
D009	I-13
D100	E-4
D101	C-10
D102	C-10
D103	E-7
D104	D-1
D200	B-11
D201	F-12
D202	B-10
D203	B-10
D300	B-10
D301	B-5
D302	C-8
D303	D-8
D304	C-10
D305	C-7
D306	D-9
D307	D-9
D308	D-7
D309	D-6
D310	E-6
D312	E-5
D314	E-6
D315	D-5
D316	D-9
D317	F-5
D318	C-10
D319	D-7
D320	C-7
D321	D-7
D322	D-5
D323	C-7
D324	D-4
D325	D-5
D326	C-8
D327	C-10
D328	D-7
D400	C-10
D401	B-9
D402	B-2
D403	C-2
D404	B-1
D405	B-1
D406	B-1
D407	A-3
D408	A-3
D409	B-2
D410	B-9
D500	H-6
D501	H-5
D502	J-4
D503	I-3
D504	I-4
D520	E-7
D521	D-8
D522	J-5
D553	I-6
D600	I-8
D602	I-9
D603	I-9
D604	I-8
D605	I-8
D606	H-8
D607	G-8
D608	G-7
D609	F-9
D800	E-2
D802	F-4
D803	F-4
D804	F-2
D805	E-3
D851	F-1
D853	G-6
D854	H-6
D961	E-7
D963	E-8
D964	E-8
D965	D-8

PRINTED WIRING BOARDS

CV [RGB AMPLIFER]

– CV Board –

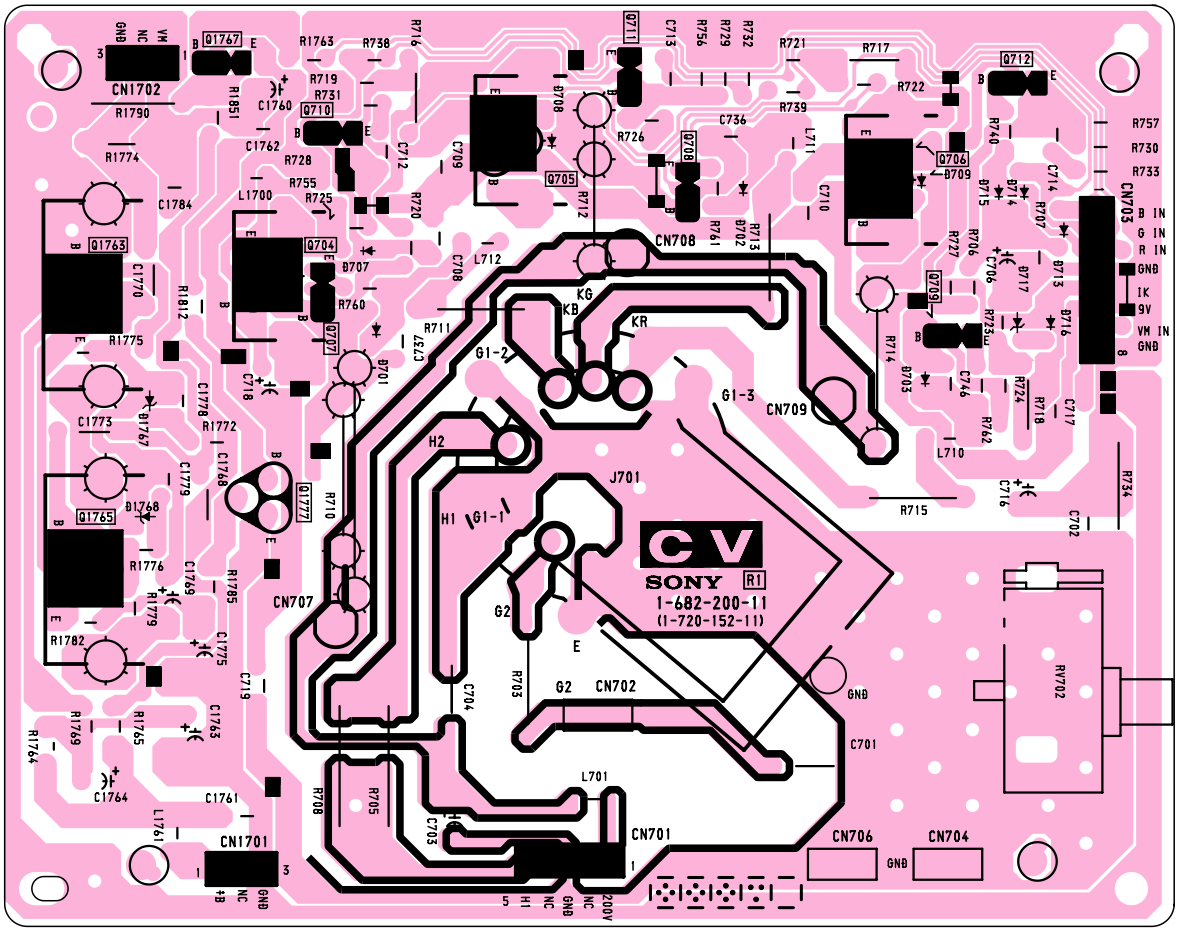

5-7. SEMICONDUCTORS

DIODE

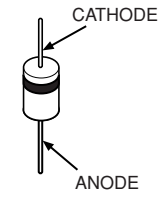		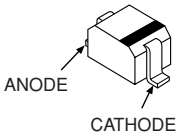	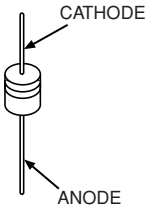	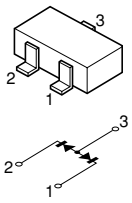	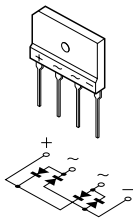
D1NL20U D3S6M-F ELIZ EG01CV1 EGP20G GPO8D	HZS361-TE NNCD8.2A-T1 NNCD9.1A-T1 RU4AM-T3 1SS119-25	RD5.6ESB2 UDZSTE-179.1B 1SS355TE-17	RD2.2ES-B2 RD5.1SB-T2 RD13SB2 RD15ES-B2 S3L20UF4	DA204K	D3SB60F3

TRANSISTOR

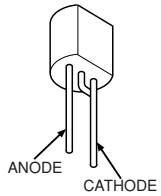	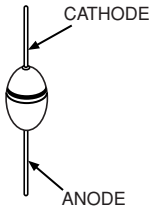	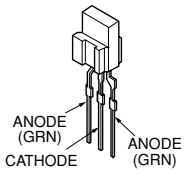	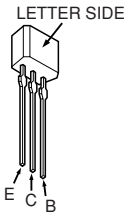	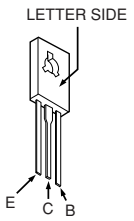	
UPC574J	BY228	SPB-25MVWF	2SC2785-HFE 2SC3311A	2SC2611	2SA1091-0

IC

					
2SC3209LK	2SD2624-CA	MSD601-RT1 MSB709-RT1 UN2211 UN2213 UN2216 2SA1162-G	IRF614-005	2SC3779C	SE-135N

			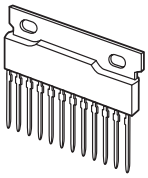	SOP 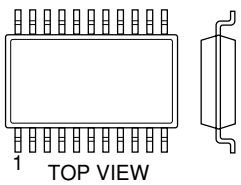 TOP VIEW Small Outline L-Leaded Pin 8~98
SBX3081-21	STR-F6707A	AN5522	AN5276	MM1319AFBE (7 PIN) NJM2903M (8 PIN)

IC

		DIP 1 TOP VIEW Dual In-line Package Pin 6~98	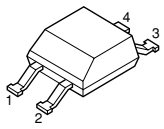 4 3 1 2	
TDA8843		CXP85224A-080S (64 PIN) M24C08-BN6 (A) (8 PIN) TDA7438D013TR	PC123F2	

SECTION 6
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

6-1. PICTURE TUBE AND CHASSIS

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16

Caution : Do not take out CRT Support block while TV set in standing position.
Note : The picture tube is upside down, and the position for the anode cap and tension springs are changed accordingly.

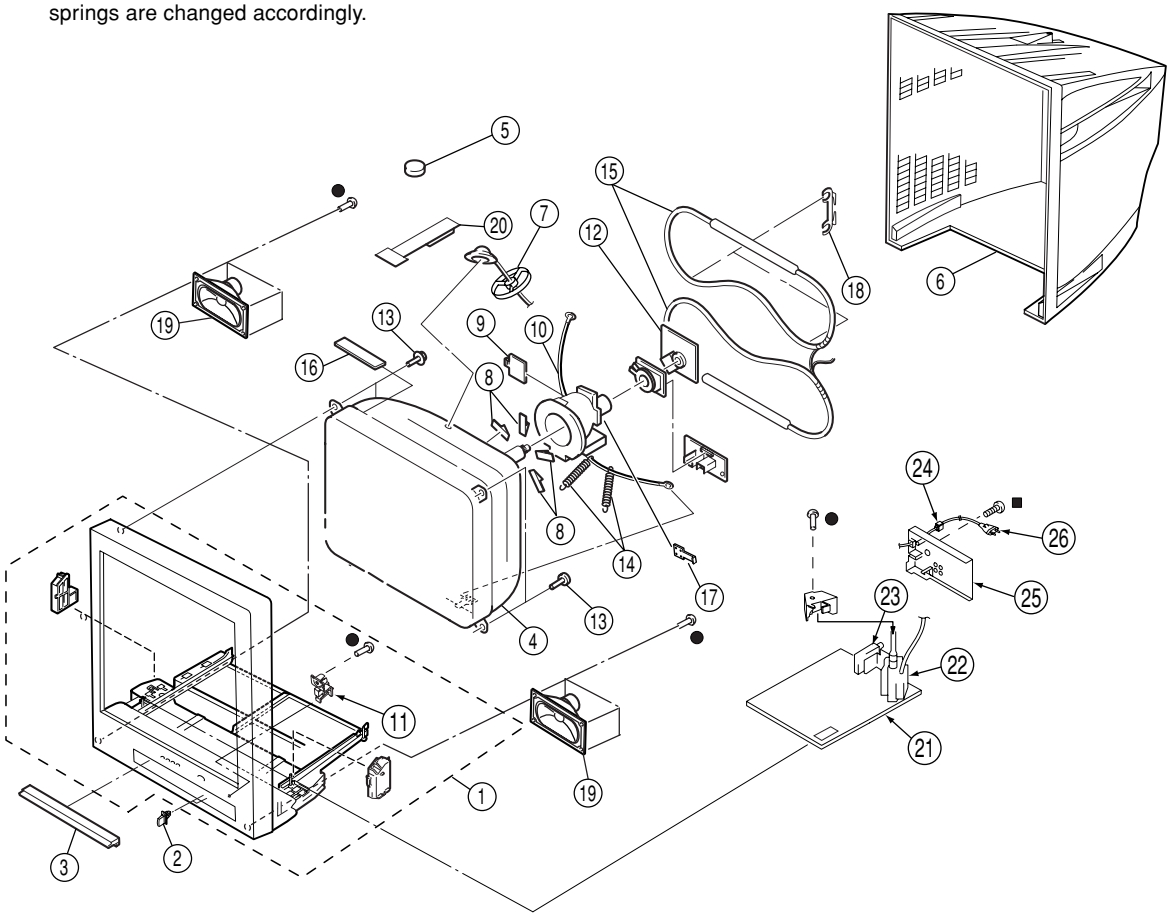

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		X-4039-596-1	BEZNET ASSY	27
2		4-081-868-01	BUTTON POWER	
3		X-4039-595-1	DOOR ASSY CONTROL	
4	⚠	8-738-809-05	PICTURE TUBE (A51LPT70X)	
5		1-452-032-00	MAGNET DISC	
6		4-081-866-01	COVER REAR (■ 8 SCREWS)	
7	*	3-704-372-11	HOLDER HV CABLE	
8		4-046-600-11	SPACER DY	
9		4-057-714-01	PIECE TLH CONVERGENCE	
10	⚠	8-451-505-11	DEFLECTION YOKE (Y21RSA-S)	
11	*	4-081-867-01	BAR OPTICAL	
12		A-1400-211-A	CV BOARD MOUNTED (NOT SUPPLY)	
13		4-365-808-01	SCREW (5) TAPPING	
14		4-078-765-01	SPRING EXTENSION	
15	⚠	1-419-479-11	COIL DEGAUSSING	

REF. NO.		PART NO.	DESCRIPTION	REMARK
16		4-069-652-02	CUSHION (HS) BAND	
17		4-034-272-11	PLATE CORRECTION TLV	
18		4-064-883-03	HOLDER DGC	
19		1-544-965-11	SPEAKER (5 x 9CM)	
20		4-051-736-42	PIECE (A) 90 CONV, CORRECT	
21	*	A-1300-141-A	A BOARD COMPLETE (NOT SUPPLY)	
22	⚠	1-453-329-21	TRANSFORMER ASSY FLYBACK (NX-4751/M3A4)	
23		8-598-591-00	TUNER BT-AG402	
24		4-022-115-00	HOLDER AC CORD	
25		4-059-710-21	BRACKET TERMINAL BOARD	
26	⚠	1-574-062-11	CORD, CONNECTOR WITH POWER	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF NO.	PART NO.	DESCRIPTION			REMARK
*	A-1300-141-A	A BOARD COMPLETE			
		**********			
	1-533-223-11	CLIP, FUSE			
*	4-055-304-01	HOLDER, LED			
		4-082-405-01	HOLDER, FBT		
	4-382-854-01	SCREW (M3X8), P, SW (+)			
	4-382-854-21	SCREW (M3X14), P, SW (+)			
	7-685-648-79	SCREW +BVTP	3X12 TYPE2 IT-3		
		<CAPACITOR>			
C001	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C002	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C004	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C005	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C006	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C007	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C009	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C010	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C011	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C012	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C013	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C014	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C015	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C016	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C018	1-126-961-11	ELECT	2.2UF	20.00%	50V
C019	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C020	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C021	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C022	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C023	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C024	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C025	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C026	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C027	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C028	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C029	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C030	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C031	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C032	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C033	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C034	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C035	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C036	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C037	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C038	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C039	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C041	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V
C042	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C043	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C044	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V

REF NO.	PART NO.	DESCRIPTION			REMARK
C045	1-126-962-11	ELECT	3.3UF	20.00%	50V
C046	1-162-995-11	CERAMIC CHIP	0.022UF		50V
C047	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C048	1-126-965-91	ELECT	22UF	20.00%	50V
C049	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C050	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C051	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C052	1-126-935-11	ELECT	470UF	20.00%	10V
C053	1-126-935-11	ELECT	470UF	20.00%	10V
C054	1-104-666-11	ELECT	220UF	20.00%	25V
C055	1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C056	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C057	1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C058	1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C061	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C063	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V
C064	1-126-947-11	ELECT	47UF	20.00%	16V
C100	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C101	1-126-964-11	ELECT	10UF	20.00%	50V
C102	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C103	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C104	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C105	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C106	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C107	1-126-935-11	ELECT	470UF	20.00%	16V
C108	1-126-767-11	ELECT	1000UF	20.00%	16V
C109	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C111	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C115	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C116	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C117	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V
C121	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C122	1-162-915-11	CERAMIC CHIP	10PF	0.50PF	50V
C124	1-130-493-00	MYLAR	0.068UF	5.00%	50V
C125	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C126	1-130-493-00	MYLAR	0.068UF	5.00%	50V
C127	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C128	1-126-965-91	ELECT	22UF	20.00%	50V
C129	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C131	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C200	1-110-563-11	CERAMIC CHIP	0.068UF	10.00%	16V
C201	1-110-563-11	CERAMIC CHIP	0.068UF	10.00%	16V
C202	1-137-375-11	MYLAR	0.068UF	5.00%	50V
C203	1-126-961-11	ELECT	2.2UF	20.00%	50V
C204	1-137-375-11	MYLAR	0.068UF	5.00%	50V
C205	1-126-961-11	ELECT	2.2UF	20.00%	50V
C206	1-126-968-11	ELECT	100UF	20.00%	50V
C207	1-126-942-61	ELECT	1000UF	20.00%	25V
C208	1-128-551-11	ELECT	22UF	20.00%	25V
C209	1-126-942-61	ELECT	1000UF	20.00%	25V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C210	1-128-551-11	ELECT	22UF	20.00%	25V
C211	1-126-964-11	ELECT	10UF	20.00%	50V
C212	1-126-942-61	ELECT	1000UF	20.00%	25V
C213	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C214	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C215	1-110-563-11	CERAMIC CHIP	0.068UF	10.00%	16V
C216	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C217	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	16V
C218	1-110-563-11	CERAMIC CHIP	0.068UF	10.00%	16V
C219	1-163-024-00	CERAMIC CHIP	0.018UF	10.00%	50V
C220	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	16V
C221	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C222	1-163-024-00	CERAMIC CHIP	0.018UF	10.00%	50V
C223	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C224	1-126-960-11	ELECT	1UF	20.00%	50V
C225	1-126-960-11	ELECT	1UF	20.00%	50V
C226	1-126-963-11	ELECT	4.7UF	20.00%	50V
C227	1-126-947-11	ELECT	47UF	20.00%	16V
C228	1-126-959-11	ELECT	0.47UF	20.00%	50V
C229	1-126-959-11	ELECT	0.47UF	20.00%	50V
C230	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C231	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C232	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C240	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C241	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C242	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C300	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V
C301	1-162-920-11	CERAMIC CHIP	27PF	5.00%	50V
C304	1-119-662-91	CERAMIC CHIP	150PF	1.00%	50V
C305	1-126-933-11	ELECT	100UF	20.00%	16V
C306	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C308	1-163-131-00	CERAMIC CHIP	390PF	5.00%	50V
C308	1-216-295-91	SHORT	0		
C309	1-163-263-11	CERAMIC CHIP	330PF	5.00%	50V
C309	1-216-295-91	SHORT	0		
C310	1-163-131-00	CERAMIC CHIP	390PF	5.00%	50V
C310	1-216-295-91	SHORT	0		
C311	1-216-295-91	SHORT	0		
C312	1-162-916-11	CERAMIC CHIP	12PF	5.00%	50V
C315	1-126-961-11	ELECT	2.2UF	20.00%	50V
C317	1-216-295-91	SHORT	0		
C318	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C319	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C320	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C321	1-126-963-11	ELECT	4.7UF	20.00%	50V
C323	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C327	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C328	1-164-222-91	CERAMIC CHIP	0.22UF		25V
C329	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C330	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C332	1-126-933-11	ELECT	100UF	20.00%	16V
C335	1-126-947-11	ELECT	47UF	20.00%	16V
C337	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C339	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C342	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C343	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V
C344	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V
C345	1-162-967-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C346	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C347	1-126-933-11	ELECT	100UF	20.00%	16V

REF NO.	PART NO.	DESCRIPTION		REMARK	
C348	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C349	1-164-346-11	CERAMIC CHIP	1UF		16V
C352	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C353	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C354	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C355	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C356	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C357	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C358	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C359	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C360	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C361	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C362	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C363	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C364	1-126-964-11	ELECT	10UF	20.00%	50V
C366	1-126-933-11	ELECT	100UF	20.00%	16V
C369	1-137-194-81	FILM	0.47UF	5.00%	50V
C400	1-126-934-11	ELECT	220UF	20.00%	16V
C403	1-115-156-11	CERAMIC CHIP	1UF		10V
C404	1-126-960-11	ELECT	1UF	20.00%	50V
C405	1-126-960-11	ELECT	1UF	20.00%	50V
C406	1-164-346-11	CERAMIC CHIP	1UF		16V
C407	1-126-934-11	ELECT	220UF	20.00%	16V
C408	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C409	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C410	1-126-933-11	ELECT	100UF	20.00%	16V
C411	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C412	1-128-551-11	ELECT	22UF	20.00%	25V
C414	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C418	1-126-933-11	ELECT	100UF	20.00%	16V
C425	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C426	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C435	1-126-934-11	ELECT	220UF	20.00%	16V
C500	1-126-933-11	ELECT	100UF	20.00%	16V
C501	1-104-666-11	ELECT	220UF	20.00%	25V
C502	1-104-666-11	ELECT	220UF	20.00%	25V
C503	1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C504	1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C505	1-123-024-21	ELECT	33UF		160V
C507	1-102-228-00	CERAMIC	470PF	10.00%	500V
C508	1-107-654-11	ELECT	33UF	20.00%	250V
C509	1-106-379-12	MYLAR	0.033UF	10.00%	200V
C510	1-137-150-11	MYLAR	0.01UF	10.00%	100V
C552	1-137-194-81	FILM	0.47UF	5.00%	50V
C554	1-163-035-00	CERAMIC CHIP	0.047UF		50V
C555	1-126-949-11	ELECT	220UF	20.00%	35V
C556	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C557	1-126-948-11	ELECT	100UF	20.00%	35V
C558	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C559	1-106-220-00	MYLAR	0.1UF	10.00%	100V
C561	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C562	1-106-220-00	MYLAR	0.1UF	10.00%	100V
C600	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C601	⚠ 1-115-165-11	FILM	0.1UF	20.00%	275V
C602	1-117-752-11	ELECT(BLOCK)	330UF	20.00%	450V
C603	1-117-623-11	FILM	1500PF	3.00%	1.2KV
C604	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C605	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C606	1-104-666-11	ELECT	220UF	20.00%	25V
C607	1-161-830-00	CERAMIC	0.0047UF	99%	500V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION			REMARK
C608		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C610		1-126-948-11	ELECT	100UF	20.00%	35V
C611		1-163-145-00	CERAMIC CHIP	0.0015UF	5.00%	50V
C612	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C613		1-102-228-00	CERAMIC	470PF	10.00%	500V
C614		1-123-024-21	ELECT	33UF		160V
C615		1-102-228-00	CERAMIC	470PF	10.00%	500V
C616		1-126-943-11	ELECT	2200UF	20.00%	25V
C617		1-126-942-61	ELECT	1000UF	20.00%	25V
C618		1-126-933-11	ELECT	100UF	20.00%	16V
C619	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C620		1-162-134-11	CERAMIC	470PF	10.00%	2KV
C621		1-117-703-41	CERAMIC	0.0047UF	99%	250V
C626		1-106-383-00	MYLAR	0.047UF	10.00%	200V
C628		1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C800		1-126-960-11	ELECT	1UF	20.00%	50V
C801		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C802		1-106-375-12	MYLAR	0.022UF	99%	200V
C803		1-102-244-00	CERAMIC	220PF	10.00%	500V
C804		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C807		1-162-115-00	CERAMIC	330PF	10.00%	2KV
C808		1-106-365-00	MYLAR	0.0082UF	10.00%	200V
C809		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C810		1-106-375-12	MYLAR	0.022UF	99%	200V
C811		1-107-957-11	ELECT	1UF	20.00%	250V
C812		1-117-665-11	FILM	0.33UF	5.00%	250V
C813		1-162-115-00	CERAMIC	330PF	10.00%	2KV
C814		1-117-646-11	FILM	12000PF	3.00%	1.2KV
C852		1-107-846-11	FILM	0.1UF	5.00%	250V
C856		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C857		1-126-964-11	ELECT	10UF	20.00%	50V
C858		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C859		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C860		1-208-834-11	METAL CHIP	150K	0.5%	1/10W
C861		1-130-202-00	FILM	0.022UF	5.00%	400V
C863		1-216-295-91	SHORT	0		
C865		1-126-933-11	ELECT	100UF	20.00%	16V
C866		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C867		1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C868		1-162-995-11	CERAMIC CHIP	0.022UF		50V
C869		1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C870		1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C872		1-163-038-91	CERAMIC CHIP	0.1UF		25V
C873		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C874		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C875		1-163-038-91	CERAMIC CHIP	0.1UF		25V

<FILTER>

CF355		1-234-686-21	FILTER, BAND PASS (F5.5C)
CF360		1-234-689-21	FILTER, BAND PASS (F6.0C)
CF365		1-234-691-21	FILTER, BAND PASS (F6.5C)

<CONNECTOR>

CN003	*	1-508-797-00	PIN, CONNECTOR 4P
CN200	*	1-564-507-11	PLUG, CONNECTOR 4P
CN300	*	1-564-509-11	PLUG, CONNECTOR 6P
CN500	*	1-564-508-11	PLUG, CONNECTOR 5P
CN600	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P
CN601	*	1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P
CN602		1-580-843-11	PIN, CONNECTOR (POWER)

<TRIMMER>

CT131	1-767-774-22	TRAP, CERAMIC
CT139	1-767-775-22	TRAP, CERAMIC
CT355	1-795-343-21	TRAP, CERAMIC (T55B)
CT360	1-795-344-21	TRAP, CERAMIC (T60B)
CT365	1-795-345-21	TRAP, CERAMIC (T65B)

<DIODE>

D001	8-719-083-18	DIODE SPB-25MVWF
D004	8-719-911-19	1SS119-25
D005	8-719-109-89	RD5.6ESB2
D006	8-719-109-89	RD5.6ESB2
D007	8-719-159-10	RD5.1SB-T2
D009	8-719-159-10	RD5.1SB-T2
D103	8-759-157-40	UPC574J
D104	8-719-914-42	DA204K
D200	8-719-914-42	DA204K
D202	8-719-988-61	1SS355TE-17
D203	8-719-988-61	1SS355TE-17
D304	8-719-063-66	HZS361-TE
D305	8-719-988-61	1SS355TE-17
D306	8-719-109-54	RD2.2ES-B2
D307	8-719-988-61	1SS355TE-17
D308	8-719-988-61	1SS355TE-17
D309	8-719-069-60	UDZSTE-179.1B
D310	8-719-911-19	1SS119-25
D311	8-719-070-15	NNCD8.2A-T1
D312	8-719-069-60	UDZSTE-179.1B
D314	8-719-908-03	GP08D
D315	8-719-988-61	1SS355TE-17
D318	8-719-988-61	1SS355TE-17
D319	8-719-988-61	1SS355TE-17
D320	8-719-988-61	1SS355TE-17
D321	8-719-988-61	1SS355TE-17
D322	8-719-069-60	UDZSTE-179.1B
D323	8-719-069-60	UDZSTE-179.1B
D324	8-719-069-60	UDZSTE-179.1B
D325	8-719-069-60	UDZSTE-179.1B
D326	8-719-988-61	1SS355TE-17
D327	8-719-988-61	1SS355TE-17
D400	8-719-988-61	1SS355TE-17
D401	8-719-988-61	1SS355TE-17
D402	8-719-070-16	NNCD9.1A-T1
D403	8-719-069-60	UDZSTE-179.1B
D404	8-719-069-60	UDZSTE-179.1B
D405	8-719-070-16	NNCD9.1A-T1
D406	8-719-069-60	UDZSTE-179.1B
D407	8-719-069-60	UDZSTE-179.1B
D500	8-719-911-19	1SS119-25
D501	8-719-911-19	1SS119-25
D502	8-719-302-43	EL1Z
D503	8-719-302-43	EL1Z
D504	8-719-302-43	EL1Z
D552	8-719-908-03	GP08D
D553	8-719-109-89	RD5.6ESB2
D600	8-719-030-33	DIODE EG01CV1
D601	8-719-077-77	D3SB60F3
D602	8-719-510-73	S3L20UF4

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION	REMARK
D603		8-719-110-41	RD15ES-B2	
D604		8-719-063-70	D1NL20U	
D605		8-719-063-70	D1NL20U	
D606		8-719-063-70	D1NL20U	
D607		8-719-027-22	D3S6M-F	
D608		8-719-312-10	RU4AM-T3	
D609		8-719-510-73	S3L20UF4	
D800		8-719-911-19	1SS119-25	
D802		8-719-908-03	GP08D	
D803		8-719-908-03	GP08D	
D804		8-719-081-00	DIODE BY228/A52A/	
D805		8-719-069-60	UDZSTE-179.1B	
D851		8-719-979-85	EGP20G	
D853		8-719-988-61	1SS355TE-17	
D854		8-719-158-53	RD13SB2	
			<CONNECTOR>	
DY1	*	1-580-798-11	CONNECTOR PIN (DY) 6P	
			<FUSE>	
F600	⚠	1-532-237-11	FUSE, TIME-LAG (BET) 3.15A/250V	
			<FERRITE BEAD>	
FB001		1-410-397-21	FERRITE 1.1UH	
FB100		1-239-358-21	FILTER, NOISE	
FB602		1-410-397-21	FERRITE 1.1UH	
FB603		1-412-911-31	FERRITE 0UH	
FB604		1-410-397-21	FERRITE 1.1UH	
FB800		1-410-397-21	FERRITE 1.1UH	
			<IC>	
IC001		8-752-925-65	IC CXP85224A-080S	
IC002		8-759-371-21	MM1319AFBE	
IC003		8-759-672-78	M24C08-BN6(A)	
IC004		8-742-225-20	IC SBX3081-21	
IC201		8-759-476-86	TDA7438D013TR	
IC203		6-700-034-01	IC AN5276	
IC301		6-700-145-01	IC TDA8843/N2	
IC402		8-759-649-89	IC MC4558CD	
IC551		8-759-835-98	IC AN5522	
IC601		8-749-019-42	IC STR-F6707A	
IC602		8-749-920-61	SE-135N	
IC604		8-759-544-13	IC KA78R09TU	
IC850		8-759-700-07	NJM2903M	
IC851		8-759-649-89	IC MC4558CD	
			<JACK>	
J200		1-770-786-11	JACK	
J400		1-779-850-11	JACK BLOCK, PIN 6P	
J401		1-770-329-11	JACK, PIN 3P	
			<CHIP CONDUCTOR>	
JR001		1-216-295-91	SHORT 0	
JR003		1-216-295-91	SHORT 0	
JR006		1-216-295-91	SHORT 0	

REF NO.	PART NO.	DESCRIPTION	REMARK
JR013	1-216-295-91	SHORT 0	
JR014	1-216-295-91	SHORT 0	
JR015	1-216-295-91	SHORT 0	
JR016	1-216-295-91	SHORT 0	
JR018	1-216-295-91	SHORT 0	
JR020	1-216-295-91	SHORT 0	
JR030	1-216-295-91	SHORT 0	
JR034	1-216-295-91	SHORT 0	
JR035	1-216-295-91	SHORT 0	
JR036	1-216-295-91	SHORT 0	
JR100	1-216-295-91	SHORT 0	
JR205	1-216-295-91	SHORT 0	
JR209	1-216-295-91	SHORT 0	
JR212	1-216-295-91	SHORT 0	
JR214	1-216-295-91	SHORT 0	
JR304	1-216-295-91	SHORT 0	
JR400	1-216-295-91	SHORT 0	
		<COIL>	
L001	1-414-855-31	INDUCTOR 1UH	
L002	1-414-184-41	INDUCTOR 15UH	
L100	1-414-856-11	INDUCTOR 10UH	
L101	1-410-498-11	INDUCTOR 1.2UH	
L102	1-410-985-42	INDUCTOR 0.22UH	
L103	1-410-987-42	INDUCTOR 0.33UH	
L300	1-410-512-11	INDUCTOR 18UH	
L302	1-410-508-11	INDUCTOR 8.2UH	
L304	1-410-510-11	INDUCTOR 12UH	
L305	1-410-510-11	INDUCTOR 12UH	
L306	1-410-500-11	INDUCTOR 1.8UH	
L307	1-410-501-61	INDUCTOR 2.2UH	
L308	1-410-501-61	INDUCTOR 2.2UH	
L400	1-414-187-11	INDUCTOR 47UH	
L500	1-408-947-00	INDUCTOR 2.2MH	
L600	1-412-533-21	INDUCTOR 47UH	
L800	1-406-677-11	INDUCTOR 10MH	
L802	1-424-796-11	COIL, HORIZONTAL LINEARITY	
L803	1-414-493-41	INDUCTOR 4.7MH	
		<PHOTO COUPLER>	
PH600	⚠ 8-749-010-64	PC123F2	
		<IC LINK>	
PS600	1-533-597-41	LINK, IC	
PS601	1-533-597-41	LINK, IC	
		<TRANSISTOR>	
Q001	8-729-421-19	UN2213	
Q002	8-729-421-19	UN2213	
Q003	8-729-010-25	MSD601-RT1	
Q004	8-729-010-25	MSD601-RT1	
Q005	8-729-421-19	UN2213	
Q100	8-729-010-25	MSD601-RT1	
Q102	8-729-022-54	TRANSISTOR 2SC3779C,D-AA	
Q105	8-729-010-25	MSD601-RT1	
Q106	8-729-010-25	MSD601-RT1	
Q201	8-729-010-25	MSD601-RT1	

A

REF NO.	PART NO.	DESCRIPTION	REMARK
Q204	8-729-216-22	2SA1162-G	
Q205	8-729-421-22	UN2211	
Q300	8-729-010-05	MSB709-RT1	
Q301	8-729-010-05	MSB709-RT1	
Q303	8-729-010-25	MSD601-RT1	
Q304	8-729-010-05	MSB709-RT1	
Q305	8-729-010-05	MSB709-RT1	
Q306	8-729-010-25	MSD601-RT1	
Q307	8-729-010-25	MSD601-RT1	
Q308	8-729-424-67	UN2216	
Q309	8-729-010-25	MSD601-RT1	
Q310	8-729-424-67	UN2216	
Q312	8-729-424-67	UN2216	
Q315	8-729-010-25	MSD601-RT1	
Q318	8-729-010-25	MSD601-RT1	
Q320	8-729-421-22	UN2211	
Q400	8-729-010-05	MSB709-RT1	
Q401	8-729-424-67	UN2216	
Q402	8-729-424-67	UN2216	
Q403	8-729-010-05	MSB709-RT1	
Q404	8-729-010-05	MSB709-RT1	
Q405	8-729-010-05	MSB709-RT1	
Q406	8-729-010-25	MSD601-RT1	
Q407	8-729-010-25	MSD601-RT1	
Q500	8-729-200-17	2SA1091-O	
Q800	8-729-140-50	2SC3209LK	
Q801	8-729-055-74	TRANSISTOR 2SD2624-CA	
Q802	8-729-050-48	TRANSISTOR IRF614-005	
Q850	8-729-010-25	MSD601-RT1	
Q851	8-729-010-05	MSB709-RT1	

<RESISTOR>

REF NO.	PART NO.	DESCRIPTION			REMARK
R001	1-216-071-00	RES-CHIP	8.2K	5%	1/10W
R002	1-216-071-00	RES-CHIP	8.2K	5%	1/10W
R003	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R004	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R005	1-216-043-91	RES-CHIP	560	5%	1/10W
R006	1-216-043-91	RES-CHIP	560	5%	1/10W
R007	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R008	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R009	1-216-037-00	RES-CHIP	330	5%	1/10W
R010	1-216-037-00	RES-CHIP	330	5%	1/10W
R011	1-216-295-91	SHORT	0		
R012	1-216-049-11	RES-CHIP	1K	5%	1/10W
R013	1-216-041-00	RES-CHIP	470	5%	1/10W
R014	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R015	1-216-025-11	RES-CHIP	100	5%	1/10W
R016	1-216-037-00	RES-CHIP	330	5%	1/10W
R017	1-216-049-11	RES-CHIP	1K	5%	1/10W
R018	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R019	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R020	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R021	1-216-049-11	RES-CHIP	1K	5%	1/10W
R022	1-216-049-11	RES-CHIP	1K	5%	1/10W
R024	1-216-025-11	RES-CHIP	100	5%	1/10W
R025	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R026	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R027	1-216-101-00	RES-CHIP	150K	5%	1/10W
R028	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R029	1-216-025-11	RES-CHIP	100	5%	1/10W
R031	1-216-025-11	RES-CHIP	100	5%	1/10W
R032	1-216-049-11	RES-CHIP	1K	5%	1/10W
R033	1-216-073-91	RES-CHIP	10K	5%	1/10W
R034	1-216-073-91	RES-CHIP	10K	5%	1/10W
R035	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R036	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R037	1-216-049-11	RES-CHIP	1K	5%	1/10W
R038	1-216-049-11	RES-CHIP	1K	5%	1/10W
R039	1-216-043-91	RES-CHIP	560	5%	1/10W
R042	1-216-039-00	RES-CHIP	390	5%	1/10W
R043	1-216-025-11	RES-CHIP	100	5%	1/10W
R044	1-216-033-00	RES-CHIP	220	5%	1/10W
R045	1-216-073-91	RES-CHIP	10K	5%	1/10W
R046	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R047	1-216-025-11	RES-CHIP	100	5%	1/10W
R048	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R049	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R050	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R051	1-216-073-91	RES-CHIP	10K	5%	1/10W
R052	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R053	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R054	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R055	1-216-049-11	RES-CHIP	1K	5%	1/10W
R056	1-216-049-11	RES-CHIP	1K	5%	1/10W
R057	1-216-025-11	RES-CHIP	100	5%	1/10W
R058	1-216-025-11	RES-CHIP	100	5%	1/10W
R059	1-216-033-00	RES-CHIP	220	5%	1/10W
R060	1-216-033-00	RES-CHIP	220	5%	1/10W
R061	1-216-033-00	RES-CHIP	220	5%	1/10W
R062	1-216-049-11	RES-CHIP	1K	5%	1/10W
R063	1-216-049-11	RES-CHIP	1K	5%	1/10W
R066	1-216-049-11	RES-CHIP	1K	5%	1/10W
R072	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R073	1-216-081-00	RES-CHIP	22K	5%	1/10W
R074	1-216-049-11	RES-CHIP	1K	5%	1/10W
R077	1-216-025-11	RES-CHIP	100	5%	1/10W
R100	1-216-049-11	RES-CHIP	1K	5%	1/10W
R103	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R106	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R107	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R108	1-216-041-00	RES-CHIP	470	5%	1/10W
R109	1-216-019-00	RES-CHIP	56	5%	1/10W
R115	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R117	1-216-081-00	RES-CHIP	22K	5%	1/10W
R118	1-216-041-00	RES-CHIP	470	5%	1/10W
R119	1-216-081-00	RES-CHIP	22K	5%	1/10W
R120	1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R121	1-216-081-00	RES-CHIP	22K	5%	1/10W
R122	1-216-109-00	RES-CHIP	330K	5%	1/10W
R123	1-216-081-00	RES-CHIP	22K	5%	1/10W
R124	1-216-081-00	RES-CHIP	22K	5%	1/10W
R125	1-215-925-11	METAL OXIDE	22K	5%	3W
R128	1-216-025-11	RES-CHIP	100	5%	1/10W
R129	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R130	1-216-049-11	RES-CHIP	1K	5%	1/10W
R133	1-249-389-11	CARBON	4.7	5%	1/4W
R134	1-216-295-91	SHORT	0		
R135	1-216-295-91	SHORT	0		
R200	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R201	1-216-061-91	RES-CHIP	3.3K	5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R202	1-216-081-00	RES-CHIP	22K	5%	1/10W
R203	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R204	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R205	1-216-081-00	RES-CHIP	22K	5%	1/10W
R206	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R207	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R208	1-216-073-91	RES-CHIP	10K	5%	1/10W
R209	1-216-073-91	RES-CHIP	10K	5%	1/10W
R210	1-249-409-11	CARBON	220	5%	1/4W
R211	1-249-409-11	CARBON	220	5%	1/4W
R212	1-216-049-11	RES-CHIP	1K	5%	1/10W
R214	1-216-295-91	SHORT	0		
R215	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R216	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R217	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R218	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R219	1-216-025-11	RES-CHIP	100	5%	1/10W
R220	1-216-025-11	RES-CHIP	100	5%	1/10W
R221	1-216-025-11	RES-CHIP	100	5%	1/10W
R222	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R240	1-216-077-91	RES-CHIP	15K	5%	1/10W
R241	1-216-077-91	RES-CHIP	15K	5%	1/10W
R242	1-216-073-91	RES-CHIP	10K	5%	1/10W
R243	1-216-073-91	RES-CHIP	10K	5%	1/10W
R300	1-216-033-00	RES-CHIP	220	5%	1/10W
R301	1-216-033-00	RES-CHIP	220	5%	1/10W
R302	1-216-033-00	RES-CHIP	220	5%	1/10W
R304	1-216-049-11	RES-CHIP	1K	5%	1/10W
R304	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R304	1-216-821-11	RES-CHIP	1K	5%	1/10W
R306	1-216-039-00	RES-CHIP	390	5%	1/10W
R307	1-216-033-00	RES-CHIP	220	5%	1/10W
R308	1-216-029-00	RES-CHIP	150	5%	1/10W
R309	1-216-033-00	RES-CHIP	220	5%	1/10W
R310	1-216-039-00	RES-CHIP	390	5%	1/10W
R311	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R312	1-216-033-00	RES-CHIP	220	5%	1/10W
R313	1-216-037-00	RES-CHIP	330	5%	1/10W
R314	1-216-037-00	RES-CHIP	330	5%	1/10W
R315	1-216-081-00	RES-CHIP	22K	5%	1/10W
R316	1-216-031-00	RES-CHIP	180	5%	1/10W
R317	1-216-041-00	RES-CHIP	470	5%	1/10W
R318	1-216-081-00	RES-CHIP	22K	5%	1/10W
R319	1-216-041-00	RES-CHIP	470	5%	1/10W
R320	1-216-081-00	RES-CHIP	22K	5%	1/10W
R323	1-216-041-00	RES-CHIP	470	5%	1/10W
R327	1-216-049-11	RES-CHIP	1K	5%	1/10W
R328	1-216-025-11	RES-CHIP	100	5%	1/10W
R329	1-216-043-91	RES-CHIP	560	5%	1/10W
R330	1-216-295-91	SHORT	0		
R331	1-216-295-91	SHORT	0		
R332	1-216-295-91	SHORT	0		
R333	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R334	1-216-025-11	RES-CHIP	100	5%	1/10W
R335	1-216-025-11	RES-CHIP	100	5%	1/10W
R336	1-216-025-11	RES-CHIP	100	5%	1/10W
R337	1-216-073-91	RES-CHIP	10K	5%	1/10W
R339	1-216-035-00	RES-CHIP	270	5%	1/10W
R340	1-162-974-11	CERAMIC CHIP	0.01UF		50V
R342	1-216-295-91	SHORT	0		
R345	1-216-025-11	RES-CHIP	100	5%	1/10W
R348	1-216-025-11	RES-CHIP	100	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R350	1-216-039-00	RES-CHIP	390	5%	1/10W
R353	1-216-119-00	RES-CHIP	820K	5%	1/10W
R354	1-216-119-00	RES-CHIP	820K	5%	1/10W
R355	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R356	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R357	1-216-101-00	RES-CHIP	150K	5%	1/10W
R358	1-216-025-11	RES-CHIP	100	5%	1/10W
R360	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R361	1-216-033-00	RES-CHIP	220	5%	1/10W
R362	1-216-083-00	RES-CHIP	27K	5%	1/10W
R363	1-216-295-91	SHORT	0		
R364	1-216-077-91	RES-CHIP	15K	5%	1/10W
R365	1-216-295-91	SHORT	0		
R367	1-216-099-00	RES-CHIP	120K	5%	1/10W
R368	1-216-049-11	RES-CHIP	1K	5%	1/10W
R369	1-216-123-11	RES-CHIP	1.2M	5%	1/10W
R370	1-216-083-00	RES-CHIP	27K	5%	1/10W
R371	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R374	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R376	1-216-295-91	SHORT	0		
R389	1-216-109-00	RES-CHIP	330K	5%	1/10W
R392	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R393	1-216-295-91	SHORT	0		
R400	1-216-295-91	SHORT	0		
R401	1-216-049-11	RES-CHIP	1K	5%	1/10W
R402	1-216-025-11	RES-CHIP	100	5%	1/10W
R403	1-216-073-91	RES-CHIP	10K	5%	1/10W
R404	1-216-049-11	RES-CHIP	1K	5%	1/10W
R405	1-216-073-91	RES-CHIP	10K	5%	1/10W
R406	1-216-113-00	RES-CHIP	470K	5%	1/10W
R407	1-216-049-11	RES-CHIP	1K	5%	1/10W
R408	1-216-049-11	RES-CHIP	1K	5%	1/10W
R409	1-216-113-00	RES-CHIP	470K	5%	1/10W
R410	1-216-025-11	RES-CHIP	100	5%	1/10W
R411	1-216-049-11	RES-CHIP	1K	5%	1/10W
R412	1-216-049-11	RES-CHIP	1K	5%	1/10W
R413	1-216-113-00	RES-CHIP	470K	5%	1/10W
R414	1-216-049-11	RES-CHIP	1K	5%	1/10W
R415	1-216-073-91	RES-CHIP	10K	5%	1/10W
R416	1-216-073-91	RES-CHIP	10K	5%	1/10W
R417	1-216-021-00	RES-CHIP	68	5%	1/10W
R418	1-216-025-11	RES-CHIP	100	5%	1/10W
R419	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R420	1-216-049-11	RES-CHIP	1K	5%	1/10W
R421	1-216-049-11	RES-CHIP	1K	5%	1/10W
R422	1-216-091-00	RES-CHIP	56K	5%	1/10W
R423	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R424	1-216-091-00	RES-CHIP	56K	5%	1/10W
R425	1-216-022-00	RES-CHIP	75	5%	1/10W
R426	1-216-049-11	RES-CHIP	1K	5%	1/10W
R427	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R428	1-216-041-00	RES-CHIP	470	5%	1/10W
R429	1-216-073-91	RES-CHIP	10K	5%	1/10W
R430	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R431	1-216-091-00	RES-CHIP	56K	5%	1/10W
R432	1-216-121-11	RES-CHIP	1M	5%	1/10W
R433	1-216-091-00	RES-CHIP	56K	5%	1/10W
R434	1-216-049-11	RES-CHIP	1K	5%	1/10W
R435	1-216-121-11	RES-CHIP	1M	5%	1/10W
R436	1-216-022-00	RES-CHIP	75	5%	1/10W
R438	1-216-049-11	RES-CHIP	1K	5%	1/10W
R440	1-216-121-11	RES-CHIP	1M	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION		REMARK	
R443		1-216-121-11	RES-CHIP	1M	5%	1/10W
R445		1-216-089-91	RES-CHIP	47K	5%	1/10W
R446		1-216-089-91	RES-CHIP	47K	5%	1/10W
R500		1-260-126-81	CARBON	180K	5%	1/2W
R501		1-249-419-11	CARBON	1.5K	5%	1/4W
R502		1-216-370-11	METAL OXIDE	1.2	5%	2W
R503		1-216-091-00	RES-CHIP	56K	5%	1/10W
R504		1-216-091-00	RES-CHIP	56K	5%	1/10W
R505		1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R506		1-260-125-11	CARBON	150K	5%	1/2W
R507		1-260-288-11	CARBON	0.47	5%	1/2W
R508		1-260-288-11	CARBON	0.47	5%	1/2W
R509		1-260-288-11	CARBON	0.47	5%	1/2W
R510		1-260-127-11	CARBON	220K	5%	1/2W
R511		1-215-449-00	METAL	15K	1%	1/4W
R512		1-215-453-00	METAL	22K	1%	1/4W
R513		1-215-445-00	METAL	10K	1%	1/4W
R514		1-249-421-11	CARBON	2.2K	5%	1/4W
R553		1-249-385-11	CARBON	2.2	5%	1/4W
R554		1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R557		1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R558		1-216-081-00	RES-CHIP	22K	5%	1/10W
R559		1-216-089-91	RES-CHIP	47K	5%	1/10W
R563		1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R564		1-215-865-11	METAL OXIDE	220	5%	1W
R565		1-216-350-11	METAL OXIDE	1.2	5%	1W
R567		1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R568		1-215-461-00	METAL	47K	1%	1/4W
R600		1-215-915-11	METAL OXIDE	470	5%	3W
R602		1-240-262-11	CEMENTED	0.68	5%	10W
R603		1-240-262-11	CEMENTED	0.68	5%	10W
R605		1-217-191-21	METAL	0.18	10%	2W
R606		1-216-045-00	RES-CHIP	680	5%	1/10W
R608		1-260-127-11	CARBON	220K	5%	1/2W
R609		1-216-091-00	RES-CHIP	56K	5%	1/10W
R610		1-215-926-00	METAL OXIDE	33K	5%	3W
R611		1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R612		1-249-420-11	CARBON	1.8K	5%	1/4W
R615		1-215-877-11	METAL OXIDE	22K	5%	1W
R617		1-216-049-11	RES-CHIP	1K	5%	1/10W
R619	⚠	1-240-917-81	METAL	8.2M	5%	1W
R620		1-249-389-11	CARBON	4.7	5%	1/4W
R623		1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R624		1-260-126-81	CARBON	180K	5%	1/2W
R627		1-240-262-11	CEMENTED	0.68	5%	10W
R800		1-216-049-11	RES-CHIP	1K	5%	1/10W
R801		1-216-081-00	RES-CHIP	22K	5%	1/10W
R802		1-215-917-11	METAL OXIDE	1K	5%	3W
R803		1-260-332-51	CARBON	2.2K	5%	1/2W
R806		1-216-295-91	SHORT	0		
R808		1-249-421-11	CARBON	2.2K	5%	1/4W
R810		1-215-886-11	METAL OXIDE	100	5%	2W
R811		1-215-911-11	METAL OXIDE	100	5%	3W
R812		1-215-917-11	METAL OXIDE	1K	5%	3W
R813		1-216-049-11	RES-CHIP	1K	5%	1/10W
R814		1-215-917-11	METAL OXIDE	1K	5%	3W
R860		1-216-103-00	RES-CHIP	180K	5%	1/10W
R861		1-216-295-91	SHORT	0		
R862		1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R863		1-216-073-91	RES-CHIP	10K	5%	1/10W
R864		1-208-794-11	METAL CHIP	3.3K	0.5%	1/10W
R865		1-216-073-91	RES-CHIP	10K	5%	1/10W
R866		1-216-049-11	RES-CHIP	1K	5%	1/10W
R867		1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R868		1-249-393-11	CARBON	10	5%	1/4W
R869		1-249-381-11	CARBON	1	5%	1/4W
R870		1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R874		1-215-475-00	METAL	180K	1%	1/4W
R878		1-216-049-11	RES-CHIP	1K	5%	1/10W
R879		1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R880		1-216-097-11	RES-CHIP	100K	5%	1/10W
R881		1-216-085-91	RES-CHIP	33K	5%	1/10W
R882		1-216-073-91	RES-CHIP	10K	5%	1/10W
R883		1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R884		1-216-089-91	RES-CHIP	47K	5%	1/10W
R885		1-216-073-91	RES-CHIP	10K	5%	1/10W
R886		1-216-295-91	SHORT	0		
R887		1-215-477-00	METAL	220K	1%	1/4W
R888		1-215-477-00	METAL	220K	1%	1/4W
R889		1-216-097-11	RES-CHIP	100K	5%	1/10W
			<VARIABLE RESISTOR>			
RV300		1-241-769-11	RES, ADJ, CARBON 470K			
			<SWITCH>			
S001		1-692-431-21	SWITCH, TACTILE			
S002		1-692-431-21	SWITCH, TACTILE			
S003		1-692-431-21	SWITCH, TACTILE			
S004		1-692-431-21	SWITCH, TACTILE			
S005		1-692-431-21	SWITCH, TACTILE			
S006		1-692-431-21	SWITCH, TACTILE			
S600	⚠	1-571-433-31	SWITCH, PUSH (AC POWER)			
S800		1-572-707-11	SWITCH, LEVER			
			<#########>			
SWF100		1-781-042-11	FILTER, SURFACE WAVE			
			<TRANSFORMER>			
T503	⚠	1-453-329-21	TRANSFORMER ASSY FLYBACK			
			(NX-4751//M3A4			
T600	⚠	1-431-747-11	TRANSFORMER, LINE FILTER			
T601	⚠	1-437-333-21	TRANSFORMER, CONVERTER (SRT)			
T800		1-435-374-11	TRANSFORMER, FERRITE (HDT)			
			<THERMISTOR>			
THP600		1-803-744-11	THERMISTOR, POSITIVE			
			<TUNER>			
TU100		8-598-591-00	TUNER, VSS BT-AG402			
			<VARISTOR>			
VDR600		1-803-830-11	VARISTOR (ERZV14D621)			

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A CV

REF NO.	PART NO.	DESCRIPTION			REMARK
		<CRYSTAL>			
X001	1-577-358-21	VIBRATOR, CERAMIC			
X300	1-567-505-11	OSCILLATOR, CRYSTAL			
X301	1-567-504-11	OSCILLATOR, CRYSTAL			
**********					
	A-1400-211-A	CV BOARD MOUNTED			
		**********			
	4-382-854-01	SCREW (M3X8), P, SW (+)			
		<CAPACITOR>			
C701	1-115-350-51	CERAMIC	0.0047UF		2KV
C702	1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C703	1-107-651-11	ELECT	4.7UF	20.00%	250V
C704	1-130-202-00	FILM	0.022UF	5.00%	400V
C706	1-126-947-11	ELECT	47UF	20.00%	16V
C708	1-102-114-00	CERAMIC	470PF	10.00%	50V
C709	1-102-114-00	CERAMIC	470PF	10.00%	50V
C710	1-102-114-00	CERAMIC	470PF	10.00%	50V
C712	1-102-114-00	CERAMIC	470PF	10.00%	50V
C713	1-102-115-00	CERAMIC	560PF	10.00%	50V
C714	1-102-115-00	CERAMIC	560PF	10.00%	50V
C716	1-126-933-11	ELECT	100UF	20.00%	16V
C717	1-102-852-91	CERAMIC	47PF	5.00%	50V
C718	1-126-933-11	ELECT	100UF	20.00%	16V
C719	1-102-116-00	CERAMIC	680PF	10.00%	50V
		<######### >			
CLP701	* 4-042-408-01	PIN, COATING LEAD			
CLP702	* 4-042-408-01	PIN, COATING LEAD			
CLP703	* 4-042-408-01	PIN, COATING LEAD			
CLP704	* 4-042-408-01	PIN, COATING LEAD			
		<CONNECTOR>			
CN701	* 1-564-508-11	PLUG, CONNECTOR 5P			
CN702	1-695-915-11	TAB (CONTACT)			
CN703	1-564-509-11	PLUG, CONNECTOR 6P			
CN704	1-695-915-11	TAB (CONTACT)			
		<DIODE>			
D701	8-719-911-19	1SS119-25			
D702	8-719-911-19	1SS119-25			
D703	8-719-911-19	1SS119-25			
D707	8-719-911-19	1SS119-25			
D708	8-719-911-19	1SS119-25			
D709	8-719-911-19	1SS119-25			
D713	8-719-911-19	1SS119-25			
D714	8-719-911-19	1SS119-25			
D715	8-719-911-19	1SS119-25			
D716	8-719-911-19	1SS119-25			
D717	8-719-070-16	NNCD9.1A-T1			

REF NO.	PART NO.	DESCRIPTION			REMARK
		<JACK>			
J701	⚠ 1-540-071-22	SOCKET, CRT			
		<COIL>			
L701	1-414-185-41	INDUCTOR	22UH		
L710	1-414-183-41	INDUCTOR	10UH		
		<TRANSISTOR>			
Q704	8-729-326-11	2SC2611			
Q705	8-729-326-11	2SC2611			
Q706	8-729-326-11	2SC2611			
Q707	8-729-200-17	2SA1091-O			
Q708	8-729-200-17	2SA1091-O			
Q709	8-729-200-17	2SA1091-O			
Q710	8-729-119-78	2SC2785-HFE			
Q711	8-729-119-78	2SC2785-HFE			
Q712	8-729-119-78	2SC2785-HFE			
		<RESISTOR>			
R703	1-219-752-11	CARBON	100K	5%	1/2W
R706	1-215-417-00	METAL	680	1%	1/4W
R707	1-215-413-00	METAL	470	1%	1/4W
R708	1-216-387-11	METAL OXIDE	0.68	5%	3W
R710	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R712	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R714	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R716	1-249-923-11	CARBON	1K	5%	1/4W
R717	1-249-923-11	CARBON	1K	5%	1/4W
R718	1-249-923-11	CARBON	1K	5%	1/4W
R725	1-247-839-31	CARBON	2.2K	5%	1/4W
R726	1-247-839-31	CARBON	2.2K	5%	1/4W
R727	1-247-839-31	CARBON	2.2K	5%	1/4W
R728	1-249-408-11	CARBON	180	5%	1/4W
R729	1-249-408-11	CARBON	180	5%	1/4W
R730	1-249-408-11	CARBON	180	5%	1/4W
R731	1-247-811-31	CARBON	150	5%	1/4W
R732	1-247-811-31	CARBON	150	5%	1/4W
R733	1-247-811-31	CARBON	150	5%	1/4W
R734	1-219-753-11	CARBON	100	5%	1/2W
R738	1-247-807-31	CARBON	100	5%	1/4W
R739	1-247-807-31	CARBON	100	5%	1/4W
R740	1-247-807-31	CARBON	100	5%	1/4W
R755	1-249-418-11	CARBON	1.2K	5%	1/4W
R756	1-249-418-11	CARBON	1.2K	5%	1/4W
R757	1-249-418-11	CARBON	1.2K	5%	1/4W
		<VARIABLE RESISTOR>			
RV702	1-241-656-11	RES, ADJ, METAL FILM 110M			
**********					

REF NO.	PART NO.	DESCRIPTION	REMARK
		ACCESSORIES AND PACKING MATERIALS	
		**********	
	1-501-372-81	ANTENNA, TELESCOPIC	
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)	
	1-417-151-41	MATCHING TRANSFORMER, ANTENNA	
	4-392-003-11	BAND, HOLD	
	4-392-004-11	CLIP	
*	4-395-957-01	BAG, PROTECTION	

****

REF NO.	PART NO.	DESCRIPTION	REMARK
		BATTERY COVER REMOTE COMMANDER	
		**********	
	1-418-163-51	REMOTE COMMANDER (RM-952)	
	9-939-697-01	BATTERY COVER REMOTE COMMANDER	

Sony Corporation
Sony Technology Malaysia Sdn. Bhd.
Visual Products General Area

9-872-285-01

English
© 2002.1